DTC	62-45	Eject Error

DTC	62-51	Elevator Error

DTC	62-52	Clamp Error

DTC	63-45	Eject Error

DTC	63-51	Elevator Error

DTC	63-52	Clamp Error

DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
62-45	Disc cannot be ejected.	Radio receiver
62-51	Mechanical error occurs during elevator operation.	
62-52	Error occurs in CD player clamp.	
63-45	Magazine cannot be ejected.	
63-51	Mechanical error occurs during elevator operation.	
63-52	Error occurs in CD changer clamp.	

AV

INSPECTION PROCEDURE

HINT:
After the inspection is completed, clear the DTCs.

1 CHECK RADIO RECEIVER

(a) Check if a disc can be changed, inserted or ejected normally.
OK:
Malfunction disappears.

NG → **REPLACE RADIO RECEIVER**

OK

END

DTC	62-46	Scratched / Reversed Disc

DTC	63-46	Scratched / Reversed Disc

DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
62-46	Scratches or dirt is found on CD surface or CD is set upside down.	• CD • Radio receiver
63-46	Scratches or dirt is found on CD surface or CD is set upside down.	

INSPECTION PROCEDURE

HINT:
After the inspection is completed, clear the DTCs.

1	CHECK THAT CD IS INSERTED PROPERLY

(a) Check whether or not the CD is inserted upside down.
OK:
CD is properly inserted.

NG → **REPLACE DISC**

OK

2	CHECK DISC

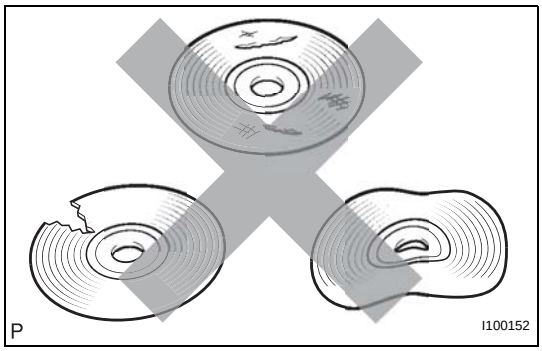

(a) Check that the disc is not deformed or cracked.
OK:
No deformation or cracks on the disc.

NG → **CHANGE DISC**

OK

3	CLEAN DISC

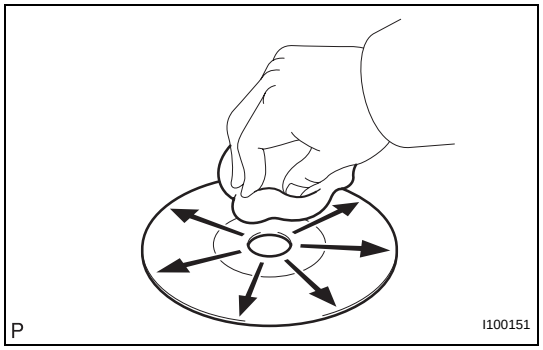

(a) Disc cleaning
  (1) If dirt is on the disc surface, wipe it clean with a soft cloth from the inside to the outside in a radial direction.
  NOTICE:
  Do not use a conventional record cleaner or anti-static preservative.

NEXT

4	CLEAR DTC

(a) Clear the DTCs (See page AV-14).

NEXT

AV

5	RECHECK DTC

(a) Recheck for DTCs and check if the same trouble occurs again.

OK:
Malfunction disappears.

OK → **END**

NG

6	REPLACE DISC

(a) Replace the disc with another and recheck.
  (1) Replace the disc with another normal one.
  (2) Clear the DTCs (See page AV-14).
  (3) Recheck for DTCs and check if the same trouble occurs again.
  OK:
  Malfunction disappears.

NG → **REPLACE RADIO RECEIVER**

OK

END