


Fiat Ducato mk3 FL from 2014 – fuse box diagrams

Year of production: 2014, 2015, 2016

Dashboard fuse box

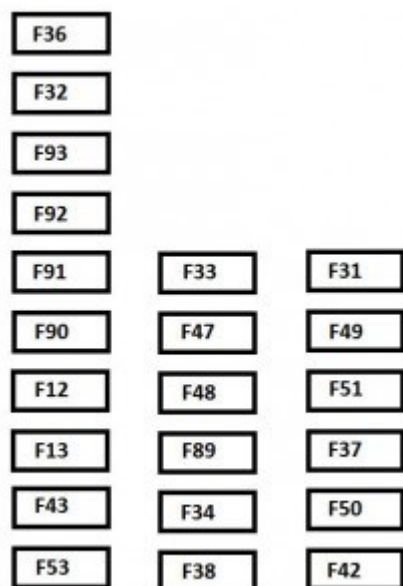


Fiat Ducato mk3 FL – fuse box – dashboard

Device protected	Fuse	Ampere rating [A]
Right dipped beam headlight	F12	7,5
Left dipped headlight	F13	7,5
Engine compartment control unit relay, dashboard control unit relay (+key)	F31	5
Lighting of roof lights in the passenger compartment (+battery)	F32	7,5
Battery monitoring sensor for Start&Stop versions (+battery)	F33	7,5
Minibus interior lights (emergency)	F34	7,5
Światła biegu wstecznego, Centralka servotronic, Czujnik wody w filtrze oleju napędowego (+kluczyka)	F35	7,5
Radio, climate control, alarm, tachograph, battery disconnecting control unit, Webasto timer (+battery)	F36	10
Brake light control (main), third brake light, instrument panel (+key)	F37	7,5
Door lock (+battery)	F38	20
Windscreen wiper (+key)	F43	20
Driver's side electric window	F47	20
Passenger side electric window	F48	20
Parking sensor control unit, radio, steering wheel controls, central control panel, left control panel, auxiliary panel, battery disconnecting control unit (+key)	F49	5

Climate control, power steering control unit, reverse lights, diesel filter water sensor, flow meter, tachograph (+key)	F51	5
Instrument panel (+battery)	F53	7,5
Absent	F89	—
Left main beam headlight	F90	7,5
Right main beam headlight	F91	7,5
Left fog light	F92	7,5
Right fog light	F93	7,5

Fuse box in engine compartment

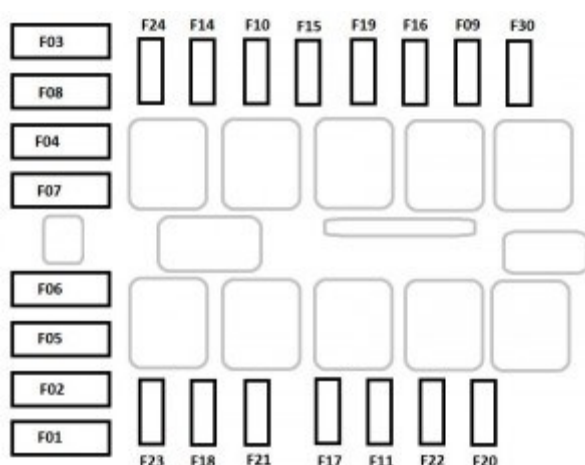


Fiat Ducato mk3 FL – fuse box – engine

compartment

Device protected	Fuse	Ampere rating [A]
Ignition switch (+battery)	F03	30
Heated filter	F04	40
Vaporiser for Puma engine/Passenger compartment ventilation with Webasto, robotised gearbox pump (+battery)	F05	20/50
Engine cooling high speed fan (+battery)	F06	40/60
Engine cooling low speed fan (+battery)	F07	40/50/60
Passenger compartment fan (+key	F08	40
Rear power socket (+battery)	F09	15
Horn	F10	15
Power socket (+battery)	F14	15
Cigar lighter (+battery)	F15	15
Powertrain Control Module, robotised gearbox control unit (+battery)	F18	7,5
Air conditioning compressor	F19	7,5
Windscreen wiper	F20	30
Auxiliary control panel for mirror movement and folding (+key)	F24	7,5
Mirrors demisting	F30	15

Right central pillar optional fuse box

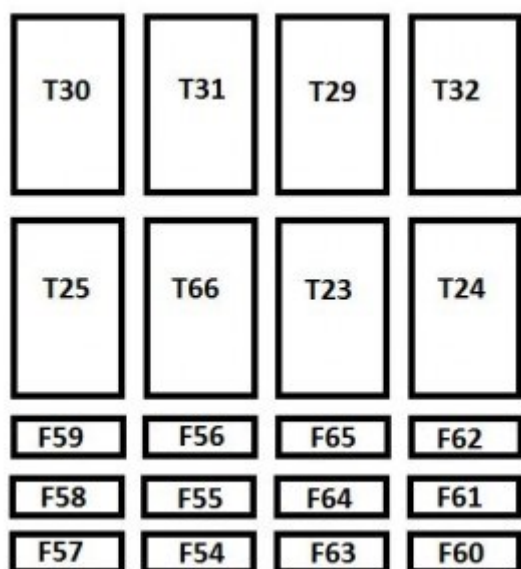

Fiat Ducato mk3 FL – fuse box – passenger

compartment – optional fuse box

Device protected	Fuse	Ampere rating [A]
Absent	F54	—
Heated seats	F55	15
Rear passenger power socket	F56	15
Additional heater under the seat	F57	10
Left heated rear window	F58	10
Right heated rear window	F59	7,5
Absent	F60	—
Absent	F61	—
Absent	F62	—
Additional passenger heater control	F63	10
Absent	F64	—
Additional passenger heater fan	F65	30

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.