

Fiat Ulysse 2002 – 2011 fuse box diagram

Year of production: 2002, 2003, 2004, 2005, 2006, 2007, 2008, 2009, 2010, 2011

Fuse box in the glove compartment



Fiat Ulysse – fuse box – dashboard

Fuse	Ampere rating [A]	Description
1	10	Rear fog lights
2	15	Rear heated window
4	15	Main electronic control unit power supply
5	10	Left brake light
7	20	Spot light, cigar lighter, glove compartment light on passenger's side, automatic rear view mirror
9	30	Front sunroof, front windscreen wiper
10	20	Diagnosis socket
11	15	Electronic alarm, infotelematic Connect system, sound system, multifunction display, steering column controls, particulate filter
12	10	Right side light, number plate lights, climate system control lights, ceiling lights (first, second and third row)
14	30	Door locking system, Super door lock
15	30	Rear window wiper
16	5	Air bag system power supply, main electronic control unit power supply

17	15	Right brake light, third brake light, trailer brake lights
18	10	Diagnosis socket power supply, brake and clutch pedal switch
20	10	Sound system power supply for main electronic control unit
22	10	Left side light; trailer side light
23	15	Electronic alarm siren
24	15	Parking sensor power supply for main electronic control unit
26	40	Heated rear window

Skrzynka bezpieczników po stronie akumulatora

In the scuttle on the floor in front of the passenger's seat, next to the battery; to access it remove the protective cove.




Fiat Ulysse mk2 – fuse box – on the battery

Fuse	Ampere rating [A]	Description
1	40	Right electric sliding door
2	40	Left electric sliding door
3	30	Hi-fi amplifier
4	—	Free
29	—	Free
30	—	Free
31	—	Free

32	25	Driver's seat with electric adjustment
33	25	Passenger's seat with electric adjustment
34	20	Third row sunroof
35	20	Second row sunroof
36	10	Passenger's heated seat
37	10	Driver's heated seat
38	15	Children safety electric device
39	20	Third row 12V rear electric socket
40	20	Driver's seat electric 12V socket

Fuse box in engine compartment

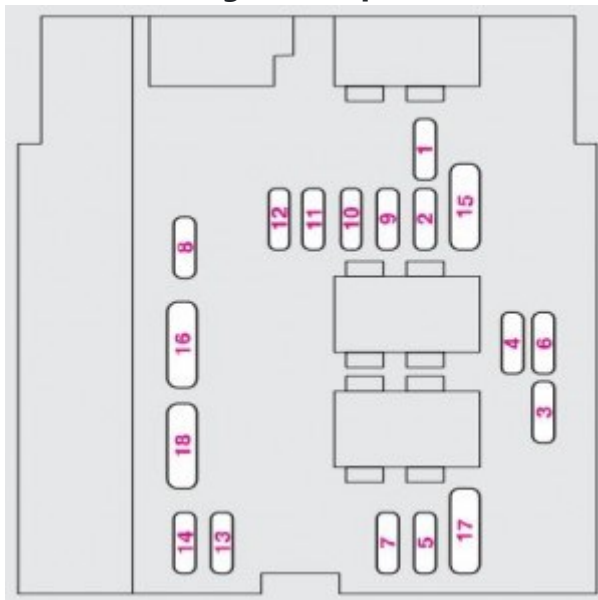

Fiat Ulysse mk2 – fuse box – engine compartment

Fuse	Ampere rating [A]	Description
1	10	Reverse light switch, Xenon lights, electric fan controls, engine coolant level, heated diesel filter, preheating spark plugs, speed control system, air debit gauge
2	15	Fuel pump, exhaust gas recirculation and turbo-compressor control system
3	10	ABS, ESP
4	10	Keyed service power supply, for main electronic control unit
5	10	Particulate filtering system
6	15	Front fog lights

7	20	Headlight washers
8	20	Relay power supply for main electronic control unit, electric fan relay controls , diesel pressure adjusting solenoid valve and exhaust gas recirculation
9	15	Left dipped beam headlight, headlight beam corrector
10	15	Right dipped beam headlight
11	10	Left main beam headlight
12	10	Right main beam headlight
13	15	Horn
14	10	Windscreen wiper pump – rear window wiper
15	30	Lambda sensor, injectors, spark plugs, canister solenoid valve, injection pump solenoid valve
17	30	Windscreen wiper
18	40	Additional fans

Fuse	Ampere rating [A]	Description
MAXI-FUSE	50	Electric fan (second speed)
MAXI-FUSE	50	ABS, ESP
MAXI-FUSE	30	ESP electric fan
MAXI-FUSE	60	Main electronic control unit power supply 1
MAXI-FUSE	70	Main electronic control unit power supply 2
MAXI-FUSE	30	Electric fan (first speed)
MAXI-FUSE	40	Fiat CODE system
MAXI-FUSE	50	Climate control system additional fans