

Lexus RX300 (XU10; 1999-2003) fuses

*In this article, we consider the first-generation Lexus RX (XU10), produced from 1999 to 2003. Here you will find fuse box diagrams of **Lexus RX 300 1999, 2000, 2001, 2002 and 2003**, get information about the location of the fuse panels inside the car, and learn about the assignment of each fuse (fuse layout).*

See other Lexus RX:

Fuse Layout Lexus RX 300 1999-2003



Cigar lighter (power outlet) fuses in the Lexus RX300 are the fuses #24 "CIG" (Cigarette lighter) and #26 "PWR OUTLET" (Power outlets) in the Instrument panel fuse box.


Passenger Compartment Fuse Box

Fuse box location

The fuse box is located in the instrument panel (on the driver's side), behind the cover.



Fuse box diagram

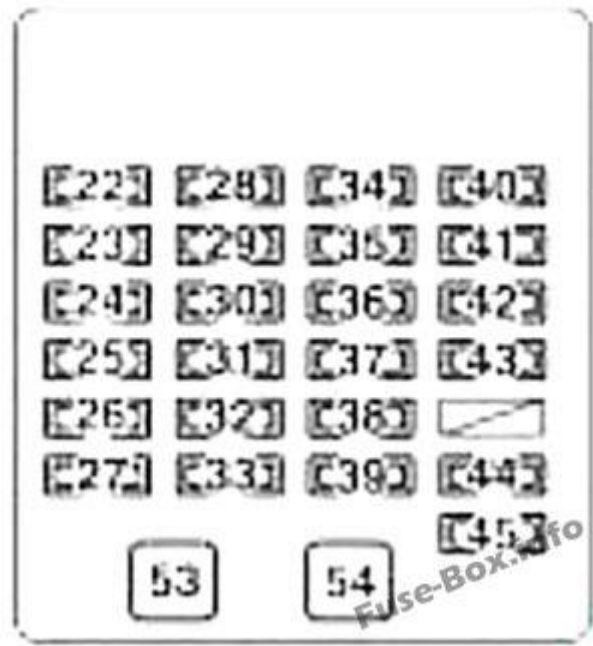

Assignment of the fuses in the Passenger Compartment

No	Name	A	Description
22	IGN	7.5	SRS system, Multiport fuel injection/Sequential multiport fuel injection system

No	Name	A	Description
23	RADIO NO.2	7.5	Audio system, Multiplex computer
24	CIG	15	Cigarette lighter, Outside rear view mirrors, Power door lock system
25	D RR DOOR	20	Rear door lock, Rear power window
26	PWR OUTLET	15	Power outlets
27	FR FOG	15	Fog lights
28	SRS-IG	15	SRS system
29	ECU-IG	15	Telephone, Inside rear view mirror, Anti-lock brake system, Traction control system, Multi-display
30	WIPER	25	Windshield wipers
31	P RR DOOR	20	Rear door lock, Rear power window
32	P FR DOOR	20	Front door lock, Front power window
33	S/ROOF	20	Moon roof
34	HEATER	15	Air conditioning system
35	GAUGE	7.5	Multiplex computer, Service reminder indicators
36	RR WIP	15	Rear window wiper
37	STOP	20	Stop lights, High mounted stoplight, Anti-lock brake system, Traction control system
38	OBD	7.5	On-board diagnosis system

No	Name	A	Description
39	SEAT HTR	15	Seat heater system
40	STARTER	7.5	Starting system
41	WASHER	10/20	Washer
42	RR FOG	7.5	No circuit
43	FR DEF	20	Rear window and outside rear view mirror defogger
44	TAIL	10	Tail lights, Side marker lights, License plate lights, Parking lights
45	PANEL	7.5	Instrument panel lights
53	AM1	40	Ignition system
54	POWER	30	Power seats

Engine Compartment Fuse Box


Fuse box location

It is located in the engine compartment (on the left-side)



Advertisements

Fuse box diagram

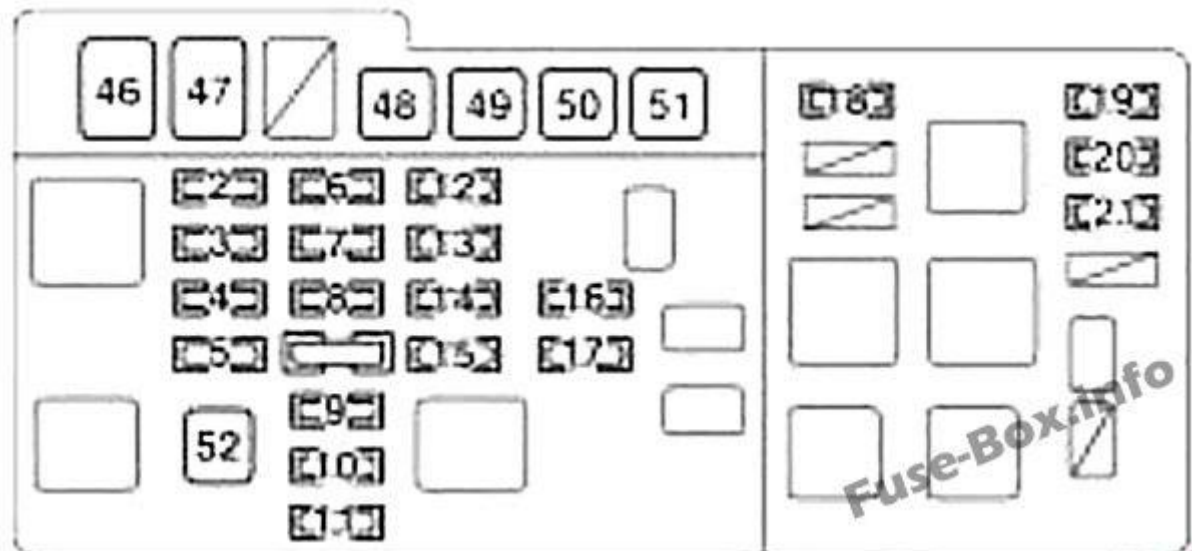



Assignment of the fuses in the Engine Compartment

№	Name	A	Description
2	TOWING	20	Trailer lights
3	H-LP R LWR	15	Right-hand headlight (low beam)
4	H-LP L LWR	15	Left-hand headlight (low beam)
5	HAZARD	15	Emergency flashers, Turn signal lights
6	AM2	20	Starting system
7	TEL	15	Telephone
8	FL DOOR	20	Power door lock system
9	SPARE	7.5	Spare fuse
10	SPARE	15	Spare fuse
11	SPARE	25	Spare fuse
12	ALT-S	7.5	Charging system

No	Name	A	Description
13	HORN	10	Theft deterrent system, Horn
14	EFI	20	Multiport fuel injection system/Sequential multiport fuel injection system
15	DOME	10	Interior light, Vanity lights, Foot lights, Rear personal light, Gauges and meters, Multi-display
16	ECU-B	7.5	Multiplex computer
17	RAD NO.1	25	Audio system
18	ABS 3	7.5	Anti-lock brake system
19	H-LP R UPR	15	Right-hand headlight (high beam)
20	H-LP L UPR	15	Left-hand headlight (high beam)
21	A/F HTR	25	Air fuel ratio sensor
46	ABS	60	Anti-lock brake system
47	ALT	140	Charging system
48	RDI	40	Cooling fan system
49	CDS	40	Cooling fan system
50	RR DEF	30	Rear window and outside rear view mirror defogger
51	HEATER	50	Blower
52	MAIN	50	Starting system

Advertisements

Engine Compartment Relay Box

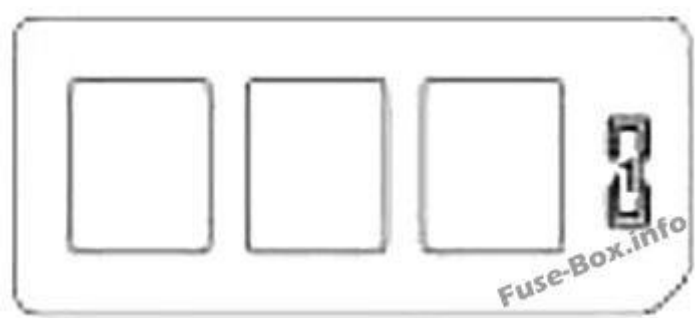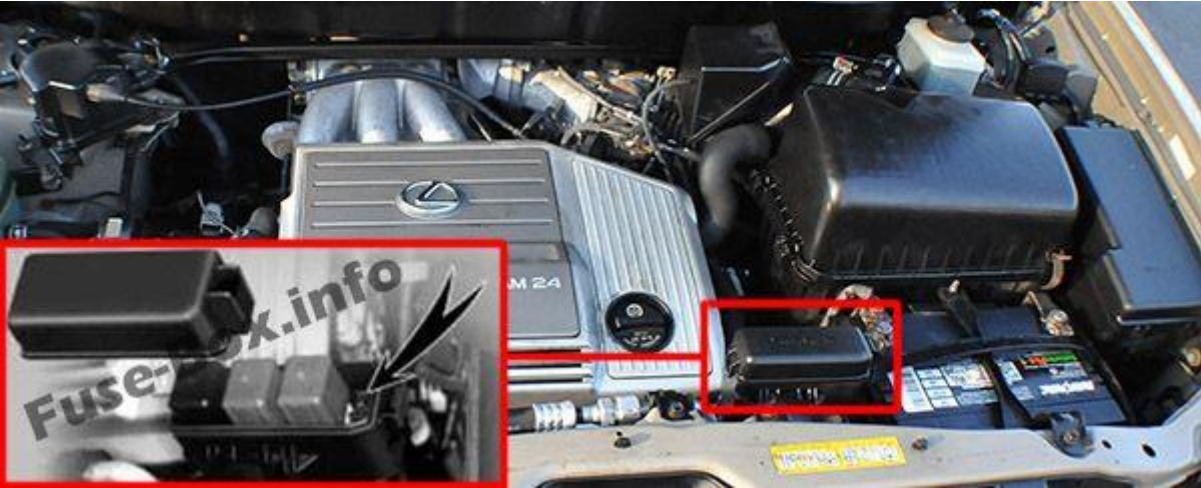

No	Name	A	Description
1	DRL	7.5	Daytime running light system