


Cadillac Eldorado 1995 fuse box diagram

Engine compartment fuse block

The maxi fuse and relays are located next to the engine compartment fuse block.

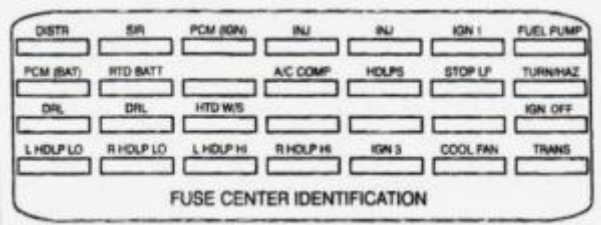


Cadillac Eldorado – fuse box diagram – engine

compartment

Fuse name	Usage
DISTR	IGNITION CONTROL MODULE
SIR	SENSERING DIAGNOSTIC MODULE
PCM (IGN)	POWERTRAIN CONTROL MODULE (PCM), PASS-Key-II DECODER MODULE
INJ	1,4,6, AND 7 FUEL INJECTORS
INJ	2,3,5, AND 8 FUEL INJECTORS
IGN 1	A/C REFRIGERANT PRESSURE SWITCH, TRANSAXLE RANGE SWITCH, STOP/BTSI/CRUISE BRAKE SWITCH, INSTRUMENT PANEL CLUSTER, KEYLESS ENTRY MODULE, DIAGNOSTIC/ENERGY RESERVE MODULE (DERM), CORNERING LIGHTS, TURN/HAZARD SWITCH ASSY, CHIME MODULE, HEADLIGHT SWITCH, TWILIGHT SENTINEUDRL MODULE
FUEL PUMP	FUEL PUMP, OIL PRESSURE SWITCH, POWERTRAIN CONTROL MODULE (PCM)
PCM (BAT)	P6WERTRAIN CONTROL MODULE (PCM)
RTD (BAT)	ROAD SENSING SUSPENSION (RSS) MODULE
A/C COMP	A/C COMPRESSOR CLUTCH
HDLPS	HEADLIGHT DIMMER SWITCH, HEADLIGHT RELAY "D" (ENGINE COMP MICRO RELAY CENTER), DRL HEADLIGHT RELAY "E (WITH DAYTIME RUNNING LIGHTS), POWERS C13
STOP LP	STOP/BTSI/CRUISE SWITCH, STOPLIGHT SWITCH CAPACITOR; ANTI -SLIP REGULATION (ASR) 5 TRACTION CONTROL
TURN/HAZ	HAZARD FLSHER, TURN FLASHER RELAY, TURN FLASHER MODULE
DRL	DAYTIME RUNNING LIGHTS (CANADA)

DRL	LEFT AND RIGHT LO BEAM HEADLAMP (CANADA)
HTD W/S	HEATED WINDSHIELD CONTROL MODULE
IGN OFF	INSTRUMENT PANEL CLUSTER
L HDLP LO	LEFT LO BEAM HEADLAMP
R HDLP LO	RIGHT LO BEAM HEADLAMP
L HDLP HI	LEFT HI BEAM HEADLAMP
R HDLP HI	RIGHT HI BEAM HEADLAMP
IGN 3	REAR DEFOGGER RELAY, ELECTRONIC LEVEL CONTROL (ELC), HEATED WINDSHIELD, HEATER AND A/C PROGRAMMER, CRUISE CONTROL
COOLING FAN	EXTENDED TRAVEL BRAKE SWITCH, POWERTRAIN CONTROL MODULE (PCM), COOLING FANRELAYS 1,2, AND 3, FRONT AND REAR HEATED OXYGEN SENSOR
TRANS/ECS	POWER STEERING PRESSURE SWITCH, EXHAUST GAS RECIRCULATION (EGR) VALVE, TRANSAXLE SHIFT SOLENOIDS A & B, EVAPORATIVE EMISSION CONTROL SOLENOID, POWERTRAIN CONTROL MODULE (PCM), TORQUE CONVERTER CLUTCH SOLENOID, TCC BRAKE SWITCH

Maxi fuse block

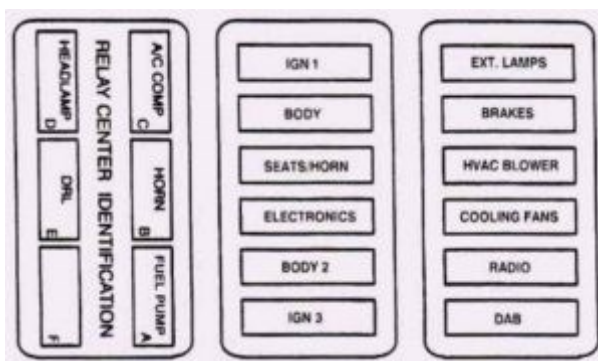

Cadillac Eldorado – fuse box diagram – maxi fuse

block

LH MAXI FUSE BLOCK


Fuse/circuit breaker (CB)	Usage
IGN 1 (Fuse)	RETAINED ACCESSORY POWER (RADIO/WIPERS), STARTER, TRUNK COMF FUSES B11 AND B13
BODY 1 (Fuse)	ENGINE COMF B11, ROAD SENSING SUSPENSION, FOG LIGHTS, TRUNK COMF FUSE C1, C3, C5, C7, C9, AND C11, TRUNK COMIP FUSE C13 (EXPORT), REAR FOG LIGHT (EXPORT)

SEATS/HORN (CB)	LEFT AND RIGHT LUMBAR RELAYS, POWER DOOR LOCKS, KEYLESS ENTRY MODULE, HORNS, FUEL DOOR RELEASE SWITCH, TRUNK RELEASE SWITCH
ELECTRONICS (Fuse)	POWERTRAIN CONTROL MODULE (PCM), ELECTRONIC CLIMATE CONTROL, RAPALLUMINATED ENTRY MODULE, INSTRUMENT PANEL CLUSTER, PASS-Key-II DECODER MODULE, THEFT DETERRENT
BODY 2 (Fuse)	LEFT AND RIGHT HEATED SEATS, ELECTRONIC LEVEL CONTROL (ELC), TRUNK LID PULL DOWN, POWER ANTENNA, REAR DEFOGGER, LEFT AND RIGHT MIRROR DEFOGGERS
IGN 3 (Fuse)	RETAINED ACCESSORY POWER, (SUNROOF/POWER WINDOWS), ENGINE COMF! FUSES D1, D3, D5, TRUNK COMI? FUSES A1 , A3, A5, A7, A9

RH MAXI FUSE BLOCK

FUSE/CIRCUIT BREAKER (CB)	USAGE
DAB (CB)	RETAINED ACCESSORY POWER (RAP) (SUNROOF/POWER WINDOWS)
RADIO (Fuse)	DELCO-BOSEB SPEAKERS, RADIO CONTROL HEAD, REMOTE RADIO RECEIVER
COOL (Fuse)	COOLING FANS
HVAC BLOWER (Fuse)	HVAC POWER MOTOR, A/C COMPRESSOR
BRAKES (Fuse)	BRAKE PRESSURE MODULATOR VALVE
EXT LAMPS (FUSE)	TURN FLASHER MODULE, HAZARD FLASHER, STOP/BTSI/CRUISE BRAKE SWITCH, PARKING LIGHTS, DAY TIME RUNNING LIGHTS (CANADA), ENGINE COME FUSES 61, B3 AND B5, TRUNK COMF! FUSES DI 1, DI3
IGN 3 (Fuse)	RETAINDE ACCESSORY POWER (ASTROROOF/POWER WINDOWS); ENGINE COMP. FUSE D1, D3 AND D5; TRUNK COMP; FUSES A1, A3, A5, A7 AND A9

Trunk Compartment Fuse Block

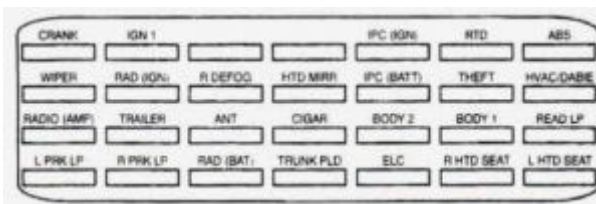

Cadillac Eldorado – fuse box diagram – trunk

compartment

Fuse name	Usage
-----------	-------

CRANK	RAP/ILLUMINATED ENTRY MODULE, DIAGNOSTIC/ENERGY RESERVE MODULE (DERM), TRANSAXLE RANGE SWITCH (NSSS)
IGN 1	TRUN/FUEL DOOR RELEASE INHIBIT RELAY "E", FUEL LEVER SENSOR, ELECTROCHROMIC MIRROR, RAP/ILLUMINATED ENTRY MODULE, THEFT DETERRENT MODULE, KEYLESS ENTRY MODULE, TURN FLASHER RELAY "F TRUNK COMP MICRO RELAY CENTER
IPC (IGN)	INSTRUMENT PANEL CLUSTER
RTD SUSP	SPEED SENSITIVE SUSPENSION
ABS	ELECTRONIC BRAKE AND TRACTION CONTROL MODULE (EBTCM)
WIPER	WIPER/WASHER SWITCH
RAD (IGN)	REMOTE RADIO RECEIVER
R DEFOG	REAR DEFOGGER
HTD MIRR	LEFT AND RIGHT OUTSIDE MIRROR DEFOGGERS
IPC (BATT)	INSTRUMENT PANEL CLUSTER
THEFT	PASS-Key-II DECODER MODULE, THEFT DETERRENT RELAY "D" (TRUNK COMP RELAY CENTER), THEFT DETERRENT MODULE
HVAC/DABIE	HEATER AND A/C PROGRAMMER, RAP/ILLUMINATED ENTRY MODULE
RADIO	ACTIVE AUDIO AMPLIFIER
TRAILER	NOT EQUIPPED
ANT	ANTENNA MOTOR
CIGAR	LEFT AND RIGHT CIGARETTE LIGHTERS, FRONT CIGARETTE LIGHTER, CHIME MODULE
BODY 2	POWER MIRROR SWITCH, RAP RELAY, LOCK-OUT INHIBIT RELAY "A" (TRUNK COMP 1 MICRO RELAY CENTER), COURTESY LIGHTS RELAY "C" (TRUNK COME 2 MICRO RELAY CENTER), RAP RELAY "E (TRUNK COMP. 2 MICRO RELAY CENTER), KEYLESS ENTRY MODULE, TRUNK LAMP
BODY 1	FRONT DOOR LOCK SWITCHES, FRONT DOOR COURTESY LAMP, GLOVE BOX LAMP, HEADLIGHT SWITCH
READ LP	LEFT AND RIGHT FRONT HEADER LAMP, GARAGE DOOR OPENER, LEFT AND RIGHT REAR HEADER LAMPS
L PRK LP	LEFT REAR TAIL/STOP/TURN LAMPS, LEFT FRONT PARK/TURN LAMPS, FRONT AND REAR LEFT SIDE MARKER LAMPS, RIGHT REAR MARKER LAMP, HEADLIGHT SWITCH, INSTRUMENT PANEL CLUSTER

R PRK LP	RADIO CONTROL HEAD, RIGHT TAILSTOP TURN LAMPS, RIGHT FRONT AND REAR SIDE MARKER LAMPS, RIGHT FRONT PARK AND TURN LAMPS, ENGINE COME LAMP, LICENSE PLATE LAMPS
RAD (BAT)	RADIO
TRUNK PLD	TRUNK LID PULL DOWN MOTOR
ELC	ELECTRONIC LEVEL CONTROL (ELC)
R HTD SEAT	PASSENGERS HEATED SEAT
L HTD SEAT	DRIVER'S HEATED SEAT