


Lincoln Town Car 1998 – 2002 fuse box diagram

Passenger compartment fuse panel

The fuse panel is located below and to the left of the steering wheel by the brake pedal.

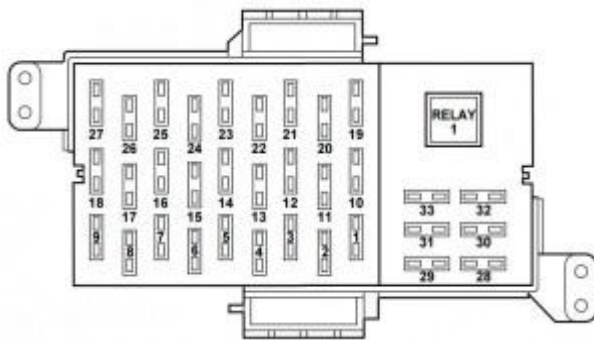

Lincoln Town Car – fuse box diagram – passenger compartment

No.	A	Protected Components
1	10	Lighting Control Module (LCM), Left-Hand Low Beam Headlamp
2	30	EATC Blower Motor
3	10	Lighting Control Module (LCM), Right-Hand Low Beam Headlamp
4	7.5	Instrument Cluster
5	7.5	Lighting Control Module (LCM), Instrument Panel Light ('01-'02), Park/Tail Lamps ('98-'00)
6	15	EATC, Heated Seats
7	15	Lighting Control Module (LCM), Day/Night Sensor/Amplifier, Park/Tail Lamps ('01-'02)


8	10	Shift Lock, Speed Control, Air Suspension, Steering Wheel Rotation Sensor
9	20	Lighting Control Module (LCM), Multi-Function Switch, Hi Beam Headlamps
10	10	'01-'02: Restraint Control Module (RCM), Air Bags
	20	'98-'00: Brake Pedal Position (BPP) Switch, Brake Pressure Switch, Stop Lamps
11	10	'98-'00: Electronic Crash Sensor (Airbag)
12	15	Instrument Cluster, Anti-Theft, Ignition Switch, Ignition Coils
13	10	Anti-Lock Brake Module, Traction Control Switch
14	7.5	Transmission Control Switch, Lighting Control Module (LCM), VCS ('01-'02)
15	20	Multi-Function Switch, Turn Signals
16	30	Wiper Control Module (WCM), Windshield Wiper Motor
17	10	Digital Transmission Range (DTR) Sensor, Back-Up Lamps, EC Mirrors
18	7.5	Lighting Control Module (LCM), Front Radio Control Unit, Cellular Telephone Transceiver, Electronic Day/Night Mirror, Compass Module, Rear Audio ('01-'02), Climate Control Module ('01-'02), VCS ('01-'02)
19	10	EATC, Clock, Instrument Cluster, PCM

20	7.5	Lighting Control Module (LCM), ABS, Shift Lock
21	20	Multi-Function Switch, Hazard Lamps
22	20	Multi-Function Switch, High Mounted Stop Lamps, Stop Lamps ('01-'02)
23	20	Datalink Connector, I/P Cigar Lighter, Reardoor Cigar Lighters (Long Wheel Base Only ('01-'02))
24	5	Front Radio Control Unit
25	15	Lighting Control Module (LCM), Courtesy/Demand Lamps
26	5	Digital Transmission Range (DTR) Sensor, Starter Relay Coil
27	20	Fuel Filler Door Release Switch
28	10	Heated Mirrors
29	20	LF Door Module, Door Locks, Decklid Release
30	7.5	LF Seat Module, Trunk Lid Release Switch, Door Lock Switches, LF Seat Control Switch, LF Door Module, Power Mirror Switch
31	7.5	Main Light Switch, Lighting Control Module (LCM)
32	25	'01-'02: Brake Pedal Position Switch (BPP), Brake Pressure Switch, Fuses 20 and 22
33	15	Front Radio Control Unit, Digital Compact Disk Changer, Cellular Telephone Transceiver, VCS ('01-'02)


Relay	
R1	Signature/Cartier: Accessory Delay Executive: Power Window

Engine Compartment Fuse Box

The power distribution box is located in the engine compartment.

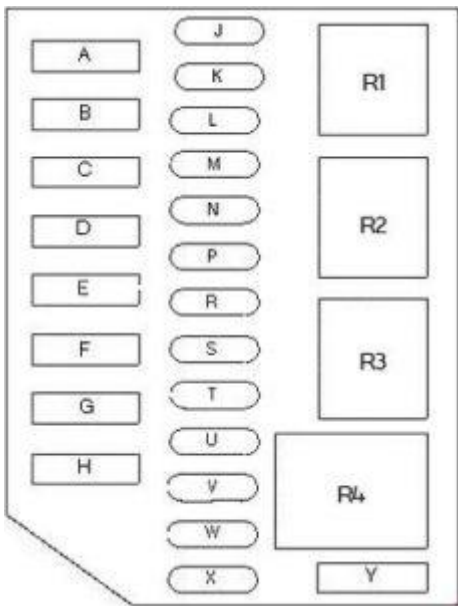

Lincoln Town Car – fuse box diagram – engine

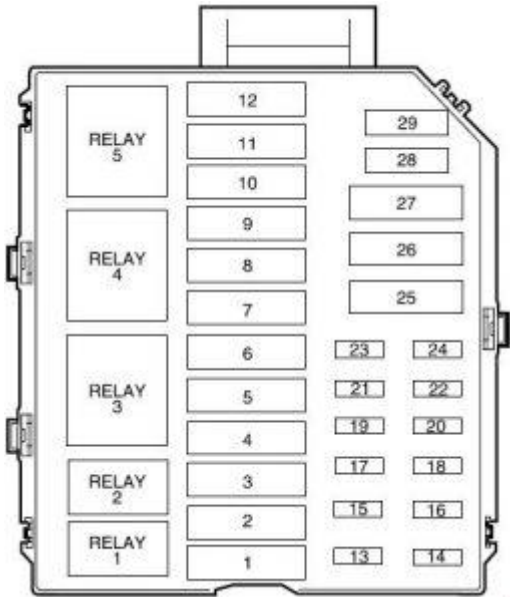

compartment
diagram – engine compartment

Lincoln Town Car – fuse box

No.	A	Protected Components
-----	---	----------------------

1	50	Ignition Switch
2	40	Ignition Switch
3	50	Cooling Fan-High Speed
4	30	PCM Power Relay
5	40	I/P Fuse Panel, Fuses 11, 19, 21, 23, 25, 27, and 32
6	30	'98-'00: Starting System
7	40	'01-'02: I/P Fuse Panel, Fuses 1, 3, 5, 7, 9, 31
	50	'98-'00: I/P Fuse Panel, Fuses 1, 3, 5, 7, 9, 31
8	30	Driver Power Seat, I/P Fuse Panel, Fuse 30, Adjustable Pedal ('01-'02), Passenger Power Seat
9	40	'01-'02: Anti-Lock Brakes
	50	'98-'00: Anti-Lock Brakes
10	40	Rear Defrost, I/P Fuse Panel ('01-'02), Fuse 28 ('01-'02)
11	40	Accessory Delay Relay (Signature/Cartier), Power Window Relay (Executive), I/P Fuse Panel, Fuse 29,
12	30	Air Suspension

13	30	'01-'02: Rear Heated Seats (Long Wheel Base Only)
	15	'98-'00: Charging System
14	20	'01-'02: Rear Power Point (Long Wheel Base Only)
	20	'98-'00: Fuel Pump
15	20	'01-'02: Rear Power Point (Longe Wheel Base)
	10	'98: Air Bags
16	30	Heated Seats
17	10	Air Suspension
18	15	Horn
19	30	Subwoofer, I/P Fuse Panel, Fuse 33
20	15	Fuel Injectors, PCM ('01-'02)
21	15	Heated Oxygen Sensors, Transmission Solenoids, EVAP Canaster Vent Solenoid, EGR Vacuum Regulator, EVAP Vapor Management Valve
22	20	'01-'02: Fuel Pump
23	15	'01-'02: Charging System
24	20	Auxiliary Power Outlet

25	30	Power Lumbar, Passenger Power Seat
26	30	<i>Circuit Breaker:</i> Cooling Fan-Low Speed
27	20	'01-'02: Anti-Lock Brakes
28	—	PCM Diode
29	—	'01-'02: Not used
Relay		
R1	Fuel Pump	
R2	A/C Clutch	
R3	PCM Power	
R4	Air Suspension	
R5	Rear Defrost	