


Lincoln Town Car 1992 – 1997 fuse box diagram

Passenger Compartment Fuse Box

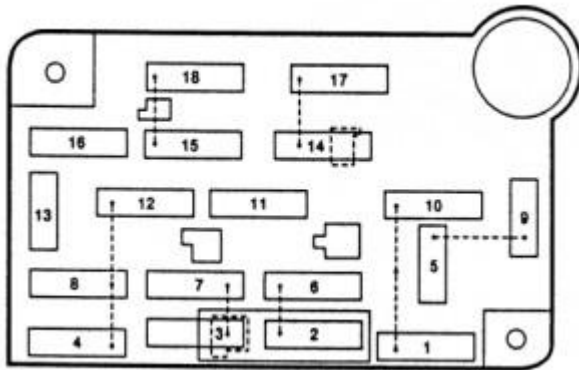

Lincoln Town Car Second Generation –

fuse box – instrument panel


No.	A	Protected components
1	30	'92-'94: CD Changer, Clock Memory, Radio Memory, Instrument Cluster, Trunk Lid Pull-down, Cellular Telephone Connector, Air Suspension, Power Antenna, Daytime Running Lamps
	15	'95-'97: Electronic Automatic Temperature Control (EATC) Module, Backup Lamps, Turn Signal Indicators, Trailer Battery Charging Relay, Heated Seats, Shift Lock
2	8.25	'92-'94: <i>Circuit Breaker:</i> Interval Wiper/Washer System
	30	'95-'97: Wiper/Washer Controller Module, Windshield Wiper Motor
3	5	'95-'97: Instrument Cluster

4	10	'92-'94: Instrument Cluster, Warning Lamps, Warning Chime, Air Bag, EVO Steering '95-'97: Lighting Control Module (LCM)
5	10	'92-'94: Heated Mirrors
	15	'95-'97: Ignition Coils, PCM Power Relay
6	10	'92-'94: Radio, Warning Chime, Dome/Reading/Map Lamps, Power Antenna, Clock, Power Windows, Shift Lock, Remote Keyless Entry, Anti-theft '95-'97: Lighting Control Module (LCM), Front Radio Control Unit, Clock, Cellular Phone, Electronic Day/Night Mirror, Compass Module
7	5	'92-'94: Instrument Panel Illumination Lamps
	15	'95-'97: Air Bag Diagnostic Monitor, Air Suspension/EVO Steering Module, Steering Wheel Rotation Sensor, Electronic Automatic Temperature Control (EATC) Module, Anti-Lock Brake Module, Instrument Cluster, Daytime Running Lamps, Speed Control Amplifier, Warning Indicators, Transmission Control Switch
8	15	'92-'94: Manual Lever Position Sensor, Remote Keyless Entry, Daytime Running Lamps, EATC Controller Module, Electronic Day/Night Mirror, Autolamps, Air Suspension/EVO Steering, Anti-theft '95-'97: Keyless Entry, Power Mirrors, Trunk Lid Pull-Down, Memory Seats, Redundant Steering Control Module, CD Changer, Cellular Phone
9	30	'92-'94: Blower Motor
	5	'95-'97: Air Bag Diagnostic Monitor, Lighting Control Module (LCM), Warning Indicators, Front Radio Control Unit

10	30	'92-'94: Cigar Lighter
	30	'95-'97: Electronic Automatic Temperature Control (EATC) Module
11	20	'92-'94: Exterior Lamps, Courtesy Lamps, Anti-theft, Autolamps
	5	'95-'97: LF Seat Module, LF Door Module
12	15	'92-'94: Speed Control, Stop Lamps, Hazard Flashers, Warning Lamps
	18	'95-'97: <i>Circuit Breaker:</i> Headlamps, Lighting Control Module (LCM)
13	15	'92-'94: Ignition Coils, EEC System
	10	'95-'97: Rear Window Defrost/Heated Mirror
14	20	'95-'97: <i>Circuit Breaker:</i> Keyless Entry, Fuel Fill Door Release, LF Seat Module, Power Seats, LF Door Module
15	15	'92-'94: Rear Window Defrost, Trailer Adapter, Headlamp Flash-to-Pass, Turn Signals, A/C Compressor Clutch '95-'97: I/P Illumination, Courtesy Lamps, Daytime Running Lamps, Lighting Control Module (LCM)
16	15	'92-'94: H02S Sensors
	15	'95-'97: Brake ON-OFF Switch, Brake Pressure Switch, Hazard Flasher, Trailer Adapter

17	10	'92-'94: Courtesy Lamps, EATC Controller Module, Warning Lamps, Power Mirrors, Remote Keyless Entry, Memory Seats
	30	'95-'97: Cigar Lighter
18	5	'92-'94: Anti-lock Brake System
	10	'95-'97: Electronic Automatic Temperature Control (EATC) Module, Instrument Cluster, On Board Diagnostic (OBD) Data Link Connector, Clock, Front Radio Control Unit

Engine Compartment Fuse Box

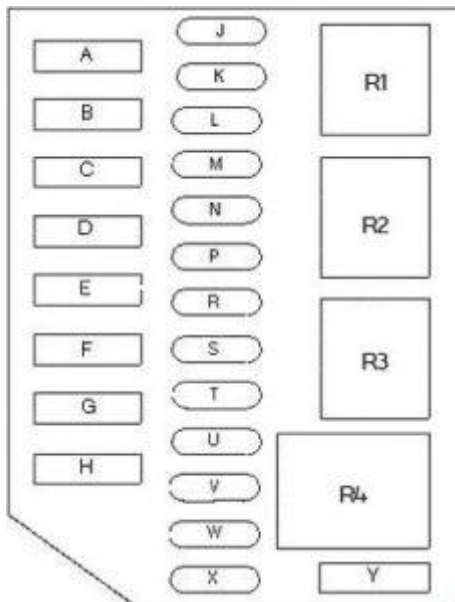

Lincoln Town Car – fuse box diagram – engine compartment


No.	A	Protected Components
A	50	Lamps
B	40	'92-'94: Anti-lock Brakes
	50	'95-'97: Anti-lock Brakes

C	50	Ignition Switch
D	40	Rear Window Defrost/Heated Mirrors
E	40	Ignition Switch
F	30	<i>Circuit Breaker:</i> Power Windows/Moonroof
G	–	Not Used
H	30	'92-'94: <i>Circuit Breaker:</i> Power Seats/Door Locks/Fuel Filler Door Release/Trunk Lid Pull-down/ Trunk Lid Release Switch
J	10	Generator/Voltage Regulator
K	10	Air Bag Restraints
L	15	'92-'94: Horn
	20	'95-'97: Horn
M	15	'92-'94: Daytime Running Lamp
N	20	Fuel Pump
P	25	'92-'94: Ignition Switch
	30	'95-'97: Cooling Fan

R	25	Radio Amplifier
S	30	'92-'94: Anti-lock Brakes
	30	'95-'97: Heated Seat
T	30	Powertrain Control Module (PCM)
U	30	Air Suspension
V	30	Trailer Tow Battery Charging
W	30	Trailer Tow Brakes
X	30	Trailer Tow Lamps
Y	–	Not Used
Relay		
R1	Horn	
R2	Air Suspension	
R3	'92-'94: Anti-lock Brakes '95-'97: Cooling Fan	
R4	'92-'94: Window Regulator Safety	

Additional Relay Box

Relay center, located on LH – fender affixed to vacuum reservoir.

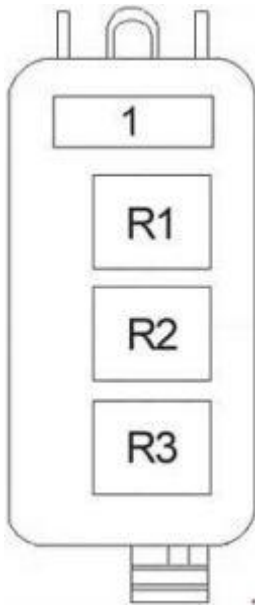

Lincoln Town Car – fuse box diagram – additional relay box

Diode

1	PCM Power
---	-----------

Relay

R1	A/C WOT Cutout
----	----------------

R2	Fuel Pump
----	-----------

R3	PCM Power
----	-----------