


Fiat Grande Punto 2006 – 2012 fuse box diagrams

Year of production: 2006, 2007, 2008, 2009, 2010, 2011, 2012


Fuse box on dashboard

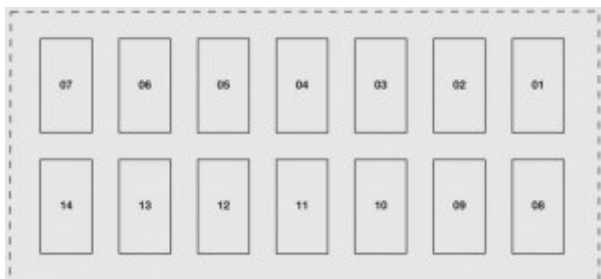

Fiat Grande Punto – fuse box – dashboard

Users	Fuse	Ampere rating [A]
Free	01	—
Power + battery instrument panel, EOBD diagnostic socket	02	10
Power + battery sound system, control unit for hands free kit with voice recognition and Bluetooth® technology, control unit for Hi-Fi audio system	03	15
Power + battery ignition switch	04	7,5
Power for windscreen/rear window washer motor pump	05	20
Power for tailgate actuator	05	15
Power for door lock motor actuators, dead lock motor actuators	07	20
Free	08	—
Power for front ceiling light, rear ceiling light, boot light, puddle light, courtesy lights	09	10
Power + key electric power steering system control unit	10	7,5
Power + key instrument panel, switch on brake pedal (brake light control circuit), switch on clutch pedal	11	7,5
Power + key brake system control unit, VDC system, switch on brake pedal	12	7,5
Power + key air bag system control unit	13	10
Power + key side button panel light, steering wheel control lights, central button panel (ASR control and led)	14	7,5
Power + key button panel light on ceiling light, front seat warming button panel (system control and led), rain sensor	14	7,5
Power + key power sunroof control unit, tyre pressure sensor control unit, control unit for hands free kit with voice recognition and Bluetooth® technology, parking sensor system control unit	14	7,5

Fuse box in engine compartment

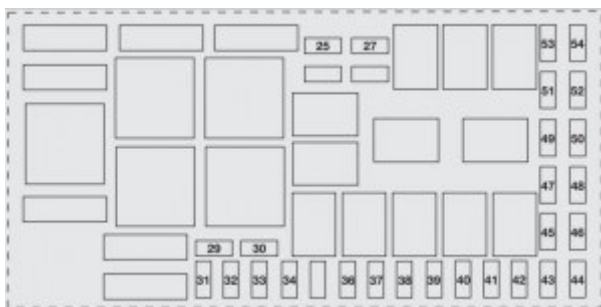


Fiat Grande Punto – fuse box – engine

compartment

Users	Fuse	Ampere rating [A]
Power + brake system battery (solenoid valves)	53	30
Left dipped beam power, headlight aiming device	38	10
Right dipped beam power	39	10
Left main beam power	40	10
Right main beam power	41	10
Power + key engine control unit	47	7,5
Power + key passenger's compartment cooling unit, electronic control unit for driver's window, power door mirrors, reversing light (1.4 8v Dualogic version)	48	7,5
Free	46	—
Power for engine diagnosis system secondary loads	34	15
Power for engine diagnosis system primary loads (ignition coils, injectors, engine control unit – Multijet versions)	30	15
Power for engine control unit (1.4 engine)	33	10
Power for fuel motor pump	51	15
Power for front fog lights	25	15
Power for headlight washer motor pump	27	30
Power for single tone horn	37	15
Power for conditioner compressor	42	7,5
Power for starter motor (magnet + 50)	49	30
Power for slider solenoid valve (1.4 16V engine)	29	7,5
Power + battery internal cooling control unit	54	7,5
Power + battery engine control unit	32	7,5
Power for passenger's compartment current outlet	31	20
Power + key reversing light, glow plug control unit, flow meter, water in diesel fuel sensor	45	10
Power for electric door mirror defrosting devices	43	10
Power for front passenger's power window motor	26	20
Power for driver's power window motor	28	20
Free	52	—
Free	44	—

Fuse box in the boot

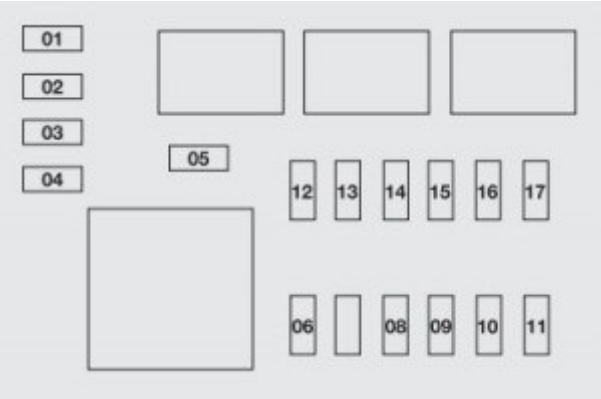

Fiat Grande Punto – fuse box – boot compartment

Users	Fuse	Ampere rating [A]
Free	01	—
Free	02	—
Free	03	—
Power for driver’s seat lumbar adjustment motor	04	10
Power for boot current outlet	05	15
Free	06	—
Free	07	—
Power for driver’s seat warming unit	08	10
Power for passenger’s seat warming unit	09	10
Power + battery power window motor on right rear door	10	20
Power + battery power window motor on left rear door	11	20
Free	12	—
Free	13	—
Free	14	—
Power + battery tyre pressure monitoring system control unit	15	10
Power + battery hi-fi system subwoofer	16	20
Power + battery power sunroof system	17	20

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.