


Isuzu Rodeo 1996 fuse box diagram

Fuse box diagram

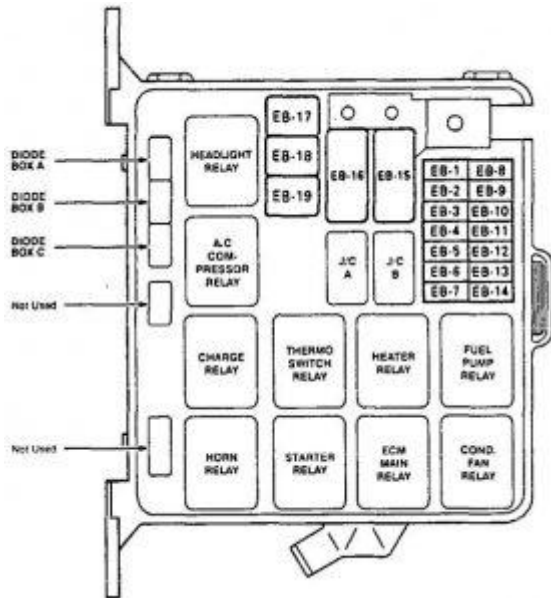


Isuzu Rodeo – fuse box diagram

Number	Fuse name	A	Function
EB-1	HAZARD	15	Hazard warning light, flasher unit
EB-2	HORN	10	Horn
EB-3	—	—	—
EB-4	BLOWER	20	Blower motor
EB-5	AIR CON.	10	Compressor control
EB-6	—	—	—
EB-7	—	—	—

EB-8	H/LAMP -LH	10	Left headlight, high beam indicator light
EB-9	H/LAMP -RH	10	Right headlight
EB-10	O2 SENSOR	10 (L4)	Oxygen sensor
		20 (V6)	
EB-11	FUEL PUMP	20	Engine control
EB-12	ECM	15	Engine control
EB-13	(ABS)	15	(ABS)
EB-14	(ABS H/U)	15	(ABS H/U)
EB-15	IGN	60	Engine control
EB-16	MAIN	100	Power distribution
EB-17	ABS	40	ABS
EB-18	—	—	—
EB-19	COND. FAN	30	Cond fan

Diode	Usage
Diode Box A	Hatch gate, charge warning light (2.6l), starter relay (3 .2L)
Diode Box B	ECM relay (2.6L)
Diode Box C	Fuel pump relay (2.6l)

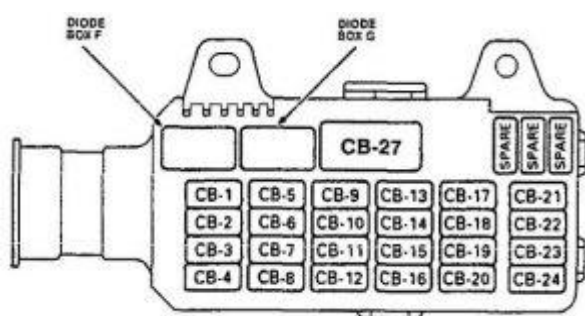

Isuzu Rodeo – fuse box diagram

Number	Fuse name	A	Function
CB-1	STARTER	10	Starting system
CB-2	—	—	—
CB-3	ENGINE DEVICE	15	Charging system, engine control, A/T shift indicator
CB-4	IG COIL	15	Ignition system
CB-5	TAIL-ILLUMI	15	Taillights
CB-6	—	—	—

CB-7	METER	15	Gauges, indicators. vehicle speed sensor, seat belt warning, interlock system
CB-8	—	—	—
CB-9	ROOM	10	Dome, luggage room, courtesy and spot lights, sound system
CB-10	—	—	—
CB-11	FRONT WIPER	20	Wiper/Washer
CB-12	ELEC. IG	10	Cruise control
CB-13	STOP	15	Brake lights, automatic transmission control, rear wheel anti-lock brake system, cruise control
CB-14	(DOOR LOCK)	20	Power windows
CB-15	BACK UP, TURN	15	Back up lights, hazard warning lights, power windows, mirror defoggers
CB-16	(REAR WIPER)	10	Rear wiper/washer
CB-17	RR DEF NO.1	15	Rear defogger, hatch gate glass release
CB-18	RR DEF NO.2	15	Hatch gate glass release
CB-19	AUDIO	15	Sound system

CB-20	CIGAR	15	Cigarette lighter
CB-21	SRS NO.1	10	Supplemental restraint system (SRS)
CB-22	SRS NO.2	10	Supplemental restraint system (SRS)
CB-23	(RWAL)	20	Rear wheel anti-lock brake system
CB-24	(ABS)	10	(ABS)
CB-27	(POWER WINDOW)	30	(Power windows)


Diode	Usage
Diode Box F	Dome light
Diode Box G	Courtesy light

() – if equipped

ECM – Engine Control Module

O2 – Oxygen

H/U – Hydraulic Unit

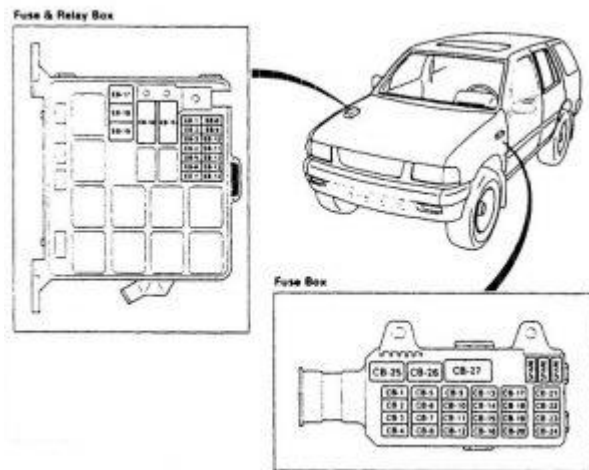

Isuzu Rodeo – fuse box diagram

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.