

Toyota FJ Cruiser – fuse and relay


Toyota FJ Cruiser was produced in 2006, 2007, 2008, 2009, 2010, 2011, 2012, 2013, 2014 and 2015. In this publication, we show a description of Toyota FJ Cruiser fuses and relays with box diagrams and locations. Highlight the cigarette lighter fuse.



Check the information with your diagrams on the protective cover of the boxes.

Passenger compartment

In the passenger compartment, the main fuse box is located at the bottom of the dashboard behind a protective cover on the driver's side.

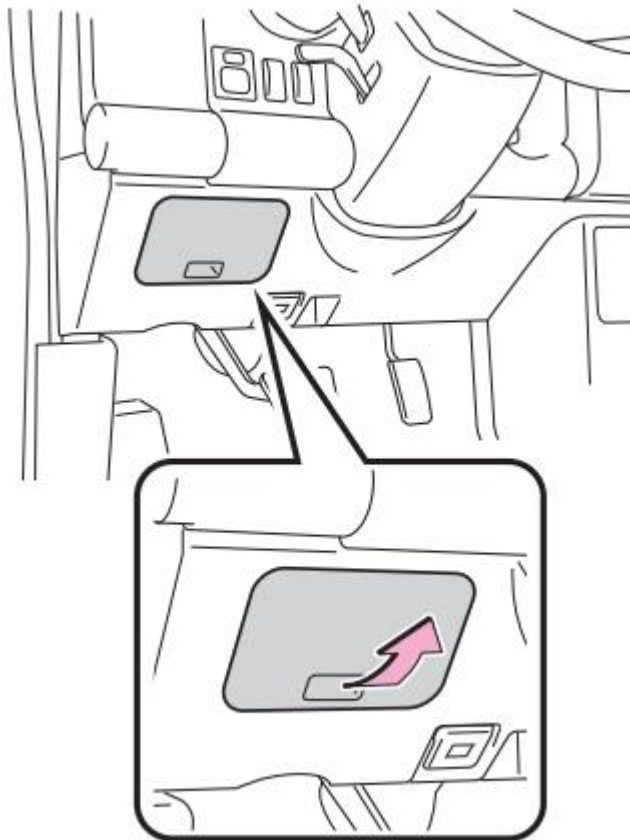


Photo



Example circuit

NOTICE		USE THE DESIGNATED FUSES ONLY.						
	A	B	C	D	E	F	G	H
1	IGN 10A		GAUGE 7.5A		FR WIP-WASH 30A			4WD/DIFF 20A
2				PWR OUTLET 15A		RR WSH 15A	ECU-IG 10A	IG1 15A
3	STA 7.5A					TAIL 10A	ACC 7.5A	
						POWER 30A		

Diagram

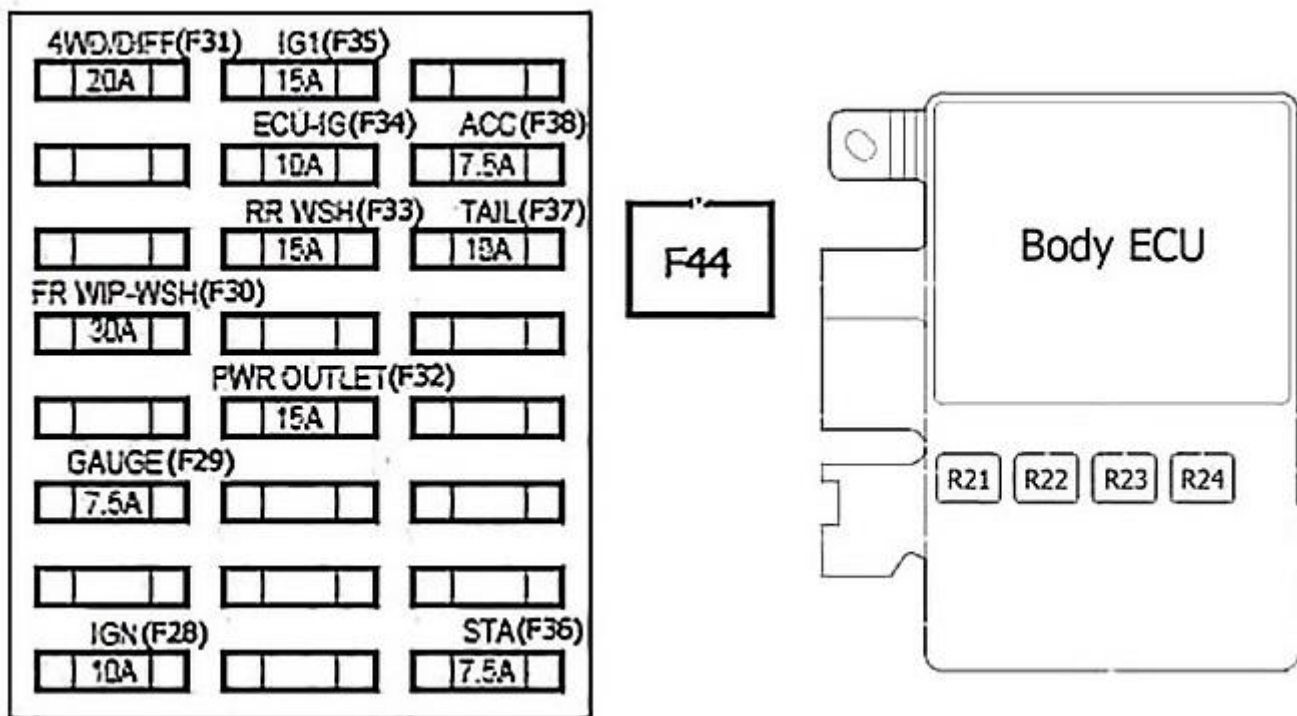

The relay elements R21 – R24 are located on the back of the unit.

Assignment

28	10A IGN – Multiport fuel injection system / sequential multiport fuel injection system, anti-lock braking system, vehicle stability control system, traction control system, active traction control system, “AUTO LSD” system, SRS airbag system, front passenger classification system.
29	7,5A GAUGE – Meter and gauge (s)
30	30A FR WIP – WSH – Windscreen wipers and washer
31	20A 4WD / DIFF – All-wheel drive system, rear differential lock system
32	15A PWR OUTLET – Power socket
33	15A RR WSH – Rear window wiper and washer, multiplex communication system
34	10A ECU – IG – Antilock Braking System, Vehicle Stability Control System, Traction Control System, Active Traction Control System, AUTO LSD System, Multiport Fuel Injection System / Sequential Multiport Fuel Injection System, Cruise Control System, Tailgate Lock System, gearshift interlock system, multiplex communication system
35	15A IG1 – Direction indicators, air conditioning, charging system, clutch release switch, anti-lock braking system, traction control system, active traction control system, vehicle stability control system, “AUTO LSD” system, reversing lights,

	intuitive parking assistant , rear differential lock system, socket, accessory counter, counter and gauge
36	7,5A STA – Start system, clutch start override switch, socket
37	10A TAIL – Tail lights, license plate light, side lights, instrument panel light control, backlight
38	7.5A ACC – Gearshift interlock system, outside rearview mirrors, audio system, socket, clock, auxiliary meter, multiplex communication system
44	30A POWER – Electric windows
Relay	
21	HORN Relay
22	TAIL Relay
23	POWER Relay
24	DC SKT Relay