


Land Rover Range P38A 1994 – 2002 fuse box diagram

Right hand seat fuse box

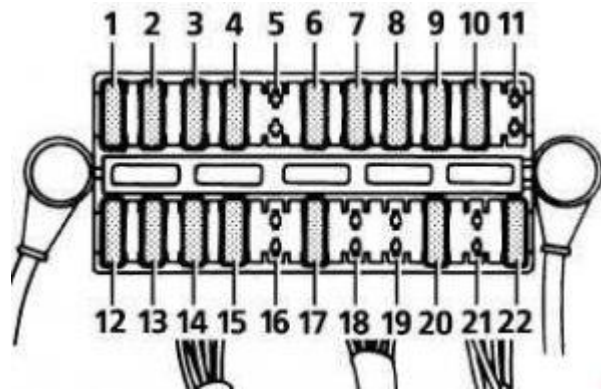

. Land Rover Range P38A – fuse box


diagram – right hand seat fuse box

No.	A	Function/component
1	10	Instrument pack, Clock, Radio, Centre console switch pack
2	30	RH rear window, LH/RH seat heater
3	5	EAT ECU – Battery supply
4	30	Transfer box ECU – Battery supply
5	–	Spare
6	10	Rear view mirror dip, Spare 1 ignition, Sun visor illumination. Up to 99MY: EAT ECU Ignition supply, Transfer box ECU ignition supply

7	10	Up to 99MY: Airbag From 99MY: EAT ECU Ignition supply, Transfer box ECU ignition supply
8	30	Car phone, radio, front cigar lighter, HEVAC. Up to 99MY: Aerial amplifier
9	20	LH/RH front ICE amplifier, LH/RH door Battery 2
10	30	RH seat Battery 1, RH seat battery 2, RH seat lumbar, Rear cushion battery 1, Fore/aft adjustment battery 1, Front cushion battery 2, backrest battery 2, headrest battery 2
11	–	Spare (When spare fuse of at least 5 Amps is inserted, transfer box moves to neutral position)
12	30	Heated rear window, LH rear window
13	20	Shift interlock solenoid, Sunroof Up to 99MY: Key inhibit solenoid
14	30	LH/RH rear central door locking, Fuel flap release, trailer battery supply
15	20	LH/RH rear ICE amplifiers, Courtesy/Load space lamps, ICE subwoofer RH rear courtesy lamp, RF remote receiver, Tail door central door locking, Rear wiper
16	30	Spare
17	10	Brake switch feed Up to 99MY: HEVAC ignition signal, Air suspension switches

18	30	6th outstation battery supply (not fitted)
19	–	Spare
20	30	LH seat battery 1, LH seat battery 2, LH seat lumbar, Rear cushion battery 1, Fore/aft adjustment battery 1, Backrest battery 2, Front cushion battery 2, Headrest battery 2
21	–	Spare
22	30	LH door battery 1 (front window only), RH door battery 2 (front window only)

Engine compartment fuse box

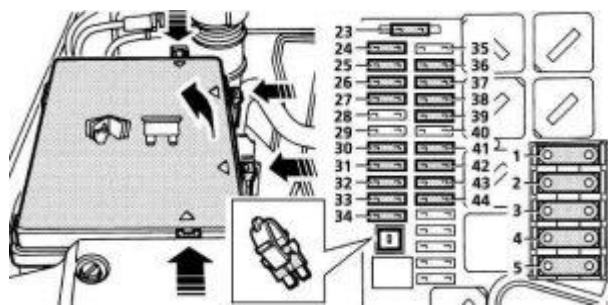

Land Rover Range P38A – fuse box diagram – engine compartment

No.	A	Function/component
1	60	*
2	50	Spare
3	40	ABS pump
4	60	*

5	60	*
23	10	Airbag SRS
24	5	ABS
25	20	Front wiper system, headlight washers
26	20	Engine management system (EMS)
27	10	Air conditioning compressor
28	30	Ignition coils – petrol engines
	15	Cooling fan – diesel engines
29	10	Air suspension
30	30	Heated front screen
31	30	Air-conditioning
32	30	Heated front screen
33	5	Diagnostics, battery back-up sounder
34	30	Heater blower
35	10	Air conditioning, air suspension

36	30	Air-conditioning
37	30	Engine management system (EMS)
38	30	ABS
39	20	Fuel pump
40	40	Starter motor, air suspension
41	20	Horn
42	10	Heating & ventilation, key inhibit
43	30	Heater blower
44	30	Engine management system (EMS)