

Lexus IS300 (XE10; 2001-2005) fuses

*In this article, we consider the first-generation Lexus IS (XE10), produced from 2000 to 2005. Here you will find fuse box diagrams of **Lexus IS300 2001, 2002, 2003, 2004 and 2005**, get information about the location of the fuse panels inside the car, and learn about the assignment of each fuse (fuse layout).*

See other Lexus IS:

Fuse Layout Lexus IS 300 2001-2005



Cigar lighter (power outlet) fuses in the Lexus IS300 is the fuse #11 in the driver's side interior fuse box.

Fuse Box Location

Passenger Compartment

There are two fuse panels, the first is located on the driver's side kick panel and the second on the passenger's side kick panel behind covers.



Engine Compartment

It is located in the engine compartment near the battery.




Advertisements

Fuse box diagrams

2001, 2002

Passenger Compartment

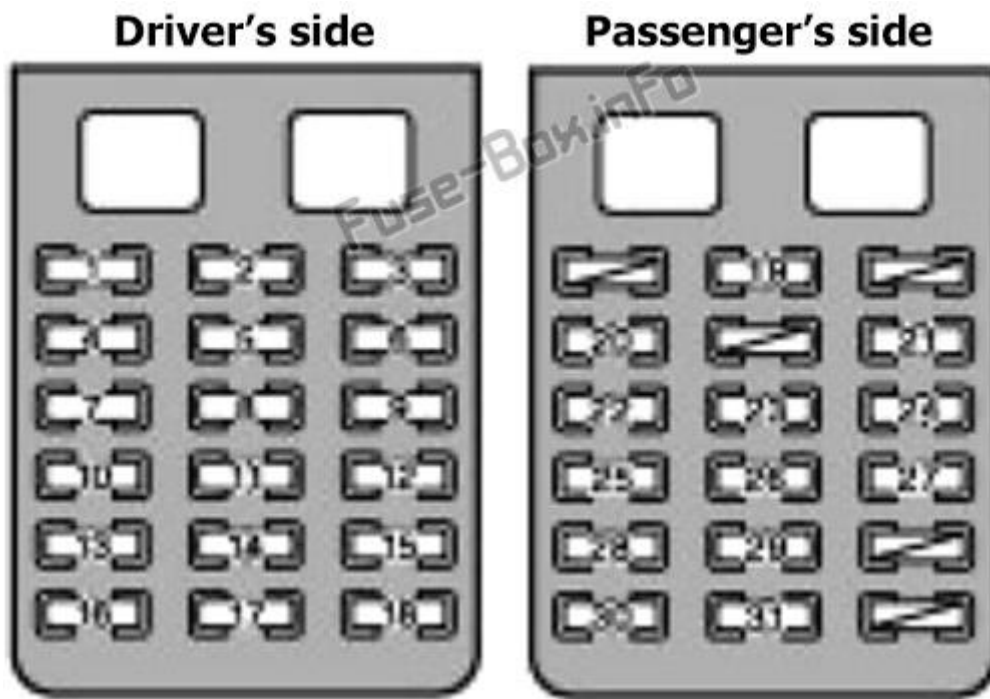


Assignment of the fuses in the passenger compartment (2001-2002)

№	NAME	AMPERE	CIRCUIT
1	D FR P/W	20	Power window system
2	TAIL	10	Tail lights, Side marker lights, License plate lights, Parking lights
3	GAUGE	10	Back-up lights, Power window, Gauges and meters, Service reminder indicators and buzzers, Emergency flashers, Windshield defogger, Outside rear view mirror defogger
4	DOOR	20	Door lock system
5	PANEL	7.5	Instrument panel lights, Seat heater, Cigarette lighter, Automatic transmission system, Traction control system, Rear fog light, Ashtray light
6	WASHER	15	Windshield washer, Headlight cleaner
7	STARTER	7.5	Starting system
8	FR DEF	20	No circuit
9	A/C	10	Air conditioning system
10	SEAT HTR	15	Seat heater

№	NAME	AMPERE	CIRCUIT
11	CIG	15	Cigarette lighter, Power outlet
12	S/ROOF	30	Moon roof
13	ECU-IG	10	Radiator fan, Anti-lock brake system, Moon roof, Shift lock system, Air conditioning system, Door lock system, Headlight beam level control, Theft deterrent system
14	SRS-ACC	10	SRS system
15	STOP	15	Stop lights, Shift lock system, Anti-lock brake system
16	WIPER	25	Windshield wipers
17	RADIO NO.2	10	Audio, Air conditioning, Outside rear view mirror, Shift lock system
18	D P/SEAT	30	Power seat system
19	DOME	7.5	Interior lights, Trunk light, Vanity lights, Ignition switch light, Map light, Door courtesy lights
20	FR FOG	15	Fog lights
21	P FR P/W	20	Power window system
22	TV	7.5	Television
23	ECU-B2	7.5	Theft deterrent system, Door lock system
24	D RR P/W	20	Power window system
25	MIR HTR	15	Outside rear view mirror
26	MPX-B	10	Power window system, Air conditioning, Gauges and meters, Theft deterrent system
27	P RR P/W	20	Power window system

№	NAME	AMPERE	CIRCUIT
28	SRS-B	7.5	SRS system, Door lock system
29	P P/SEAT	30	Power seat system
30	OBD	7.5	On-board diagnosis system
31	IGN	7.5	SRS system, Multiport fuel injection system/sequential multiport fuel injection system, Cruise control system

Engine Compartment

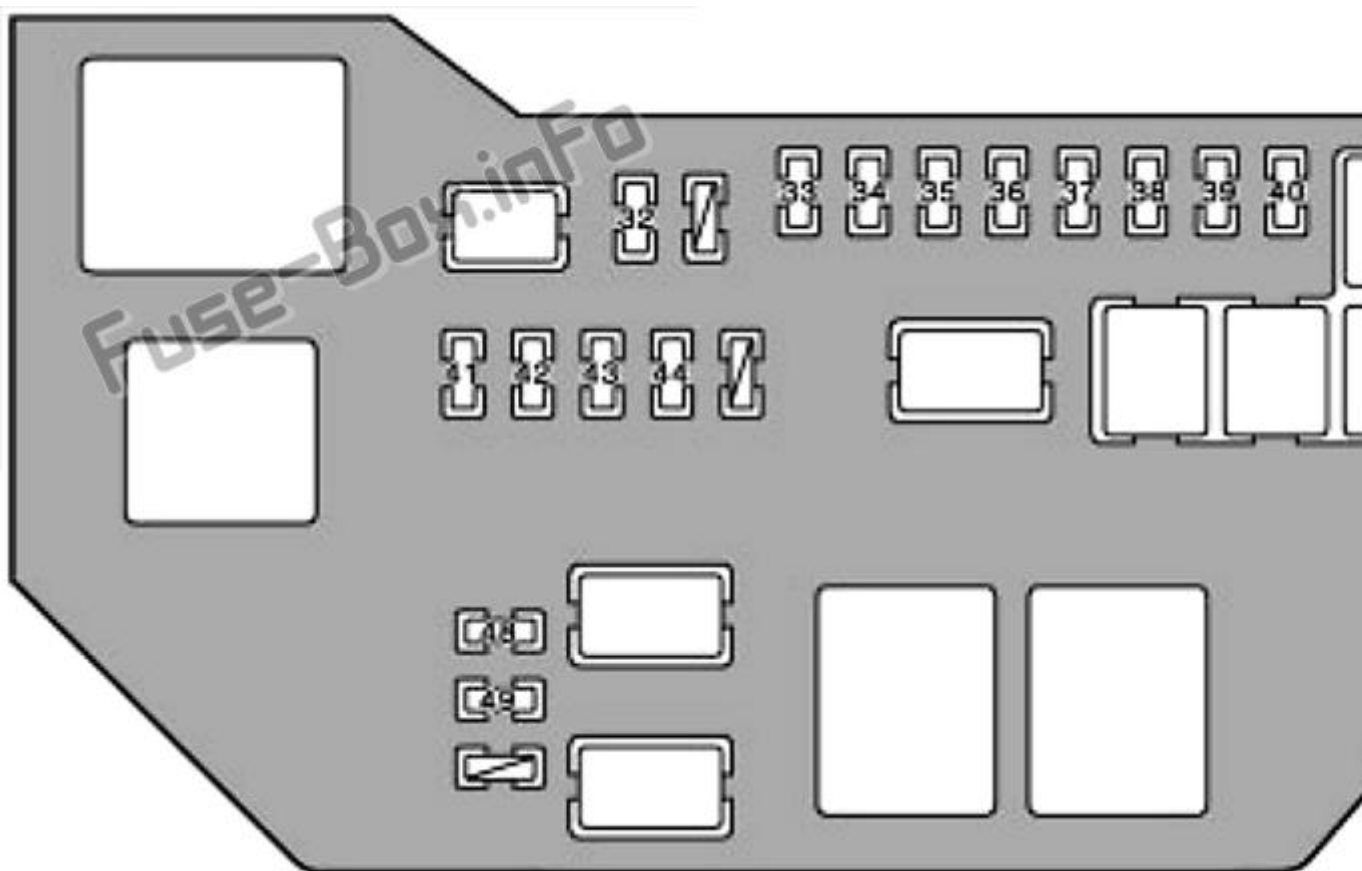

Assignment of the fuses in the engine compartment (2001-2002)

№	NAME	AMPERE	CIRCUIT
32	ECU-B1	20	Theft deterrent system, Door lock system, Interior light, Trunk light, Vanity light, Ignition switch light, Map light, Door courtesy lights, Power window system, Air conditioning, Gauges and meters
33	ALT-S	7.5	Charging system


№	NAME	AMPERE	CIRCUIT
34	ETCS	15	Electronic throttle control system
35	AM2	20	Starting system, SRS system, Multiport fuel injection system/sequential multiport fuel injection system, Cruise control system
36	HORN	10	Horn
37	TEL	7.5	Telephone
38	RADIO NO.1	20	Audio
39	TURN-HAZ	15	Turn signal lights
40	EFI	25	Multiport fuel injection system/sequential multiport fuel injection system, Emission control system, Engine immobiliser system
41	DRL NO.2	30	Daytime running light system
42	DRL NO.1	7.5	Daytime running light system
43	H-LP L LWR	15	Left-hand headlight (low beam), Fog lights
44	H-LP R LWR	15	Right-hand headlight (low beam)
45	SPARE		Spare fuse
46	SPARE		Spare fuse
47	SPARE		Spare fuse
48	H-LP L UPR	10	Left-hand headlight (high beam)

№	NAME	AMPERE	CIRCUIT
49	H-LP R UPR	10	Right-hand headlight (high beam), Service reminder indicators and buzzers

2003, 2004, 2005

Advertisements

Passenger Compartment

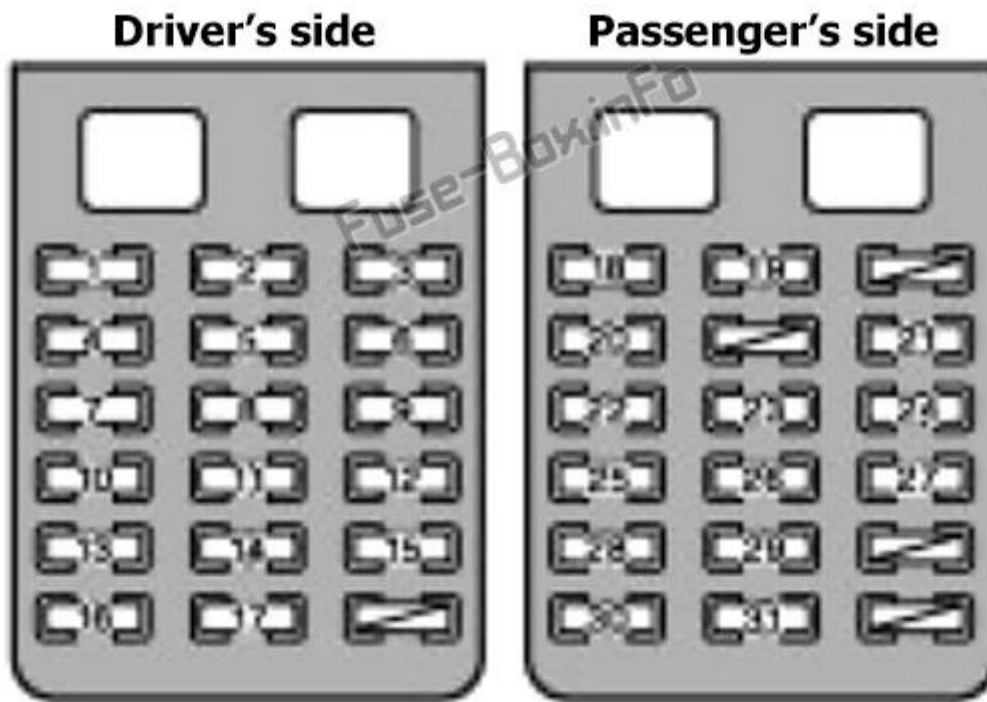


Assignment of the fuses in the passenger compartment (2003-2005)

№	NAME	AMPERE	CIRCUIT
1	D FR P/W	20	Power window system
2	TAIL	10	Tail lights, Side marker lights, License plate lights, Parking lights
3	GAUGE	10	Back-up lights, Power window, Gauges and meters, Service reminder indicators and buzzers, Emergency flashers, Windshield defogger, Outside rear view mirror defogger
4	DOOR	20	Door lock system
5	PANEL	7.5	Instrument panel lights, Seat heater, Cigarette lighter, Automatic transmission system, Traction control system, Rear fog light, Ashtray light

№	NAME	AMPERE	CIRCUIT
6	WASHER	15	Windshield washer, Headlight cleaner
7	STARTER	7.5	Starting system
8	FR DEF	20	No circuit
9	A/C	10	Air conditioning system
10	SEAT HTR	15	Seat heater
11	CIG	15	Cigarette lighter, Power outlet
12	S/ROOF	30	Moon roof
13	ECU-IG	10	Radiator fan, Anti-lock brake system, Moon roof, Shift lock system, Air conditioning system, Door lock system, Headlight beam level control, Theft deterrent system
14	SRS-ACC	10	SRS system
15	STOP	15	Stop lights, Shift lock system, Anti-lock brake system
16	WIPER	25	Windshield wipers
17	RADIO NO.2	10	Audio, Air conditioning, Outside rear view mirror, Shift lock system
18	D P/SEAT	30	Power seat system
19	DOME	7.5	Interior lights, Trunk light, Vanity lights, Ignition switch light, Map light, Door courtesy lights
20	FR FOG	15	Fog lights
21	P FR P/W	20	Power window system
22	TV	7.5	Television
23	ECU-B2	7.5	Theft deterrent system, Door lock system

№	NAME	AMPERE	CIRCUIT
24	D RR P/W	20	Power window system
25	MIR HTR	15	Outside rear view mirror
26	MPX-B	10	Power window system, Air conditioning, Gauges and meters, Theft deterrent system
27	P RR P/W	20	Power window system
28	SRS-B	7.5	SRS system, Door lock system
29	P P/SEAT	30	Power seat system
30	OBD	7.5	On-board diagnosis system
31	IGN	7.5	SRS system, Multiport fuel injection system/sequential multiport fuel injection system, Cruise control system

Engine Compartment

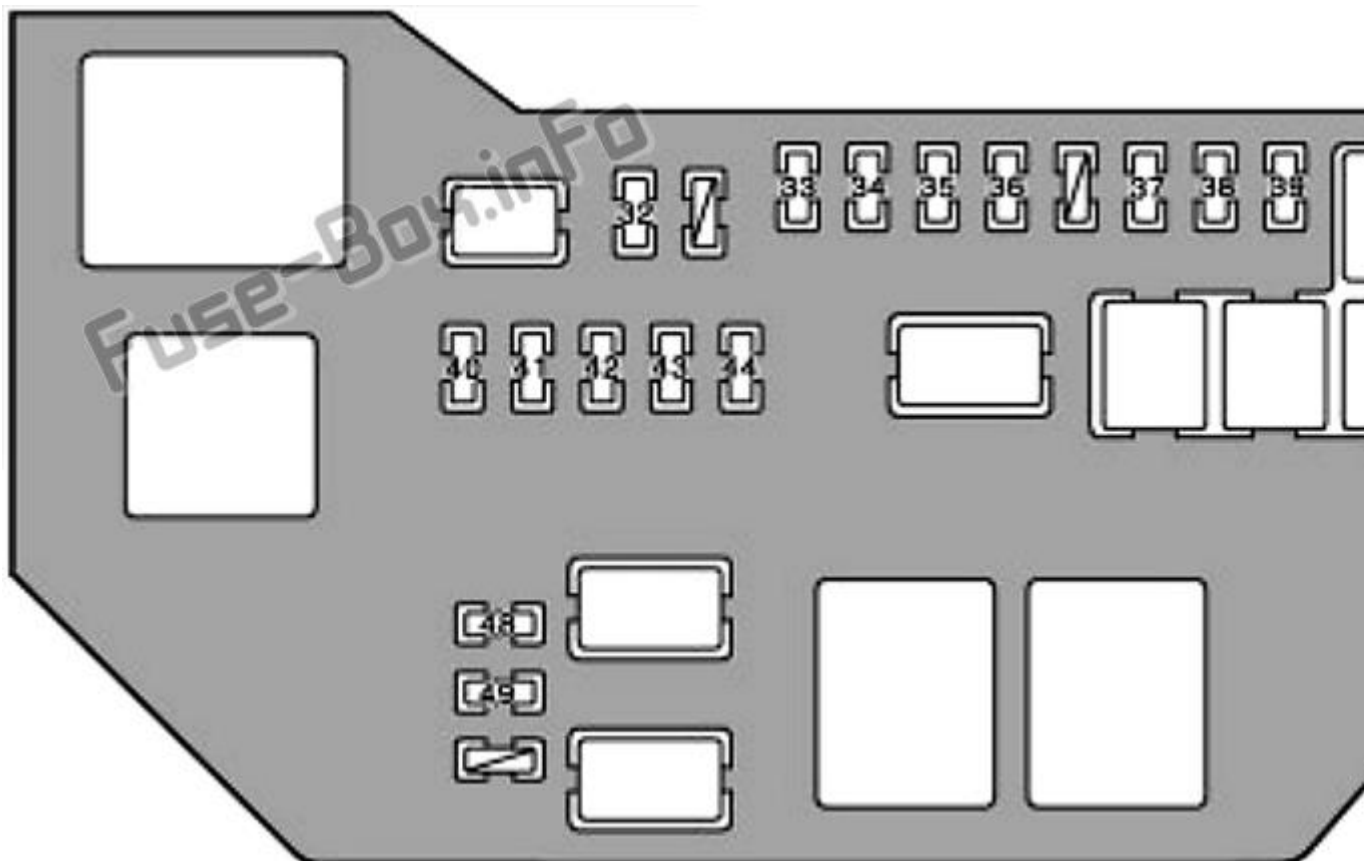

Assignment of the fuses in the engine compartment (2003-2005)

№	NAME	AMPERE	CIRCUIT
32	ECU-B1	20	Theft deterrent system, Door lock system, Interior light, Trunk light, Vanity light, Ignition switch light, Map light, Door courtesy lights, Power window system, Air conditioning, Gauges and meters
33	ALT-S	7.5	Charging system
34	ETCS	15	Electronic throttle control system
35	AM2	20	Starting system, SRS system, Multiport fuel injection system/sequential multiport fuel injection system, Cruise control system
36	HORN	10	Horn
37	TEL	7.5	Telephone
38	RADIO NO.1	20	Audio
39	TURN-HAZ	15	Turn signal lights
40	EFI	25	Multiport fuel injection system/sequential multiport fuel injection system, Emission control system, Engine immobiliser system
41	DRL No.2	30	Daytime running light system
42	DRL No.1	7.5	Daytime running light system
43	H-LP L LWR	15	Left-hand headlight (low beam), Fog lights
44	H-LP R LWR	15	Right-hand headlight (low beam)
45	SPARE		Spare fuse
46	SPARE		Spare fuse

№	NAME	AMPERE	CIRCUIT
47	SPARE		Spare fuse
48	H-LP L UPR	10	Left-hand headlight (high beam)
49	H-LP R UPR	10	Right-hand headlight (high beam), Service reminder indicators and buzzers