


Fiat Doblo 2000 – 2010 fuse box diagrams

Year of production: 2000, 2001, 2002, 2003, 2004, 2005, 2006, 2007, 2008, 2009, 2010

The instrument panel fuse panel

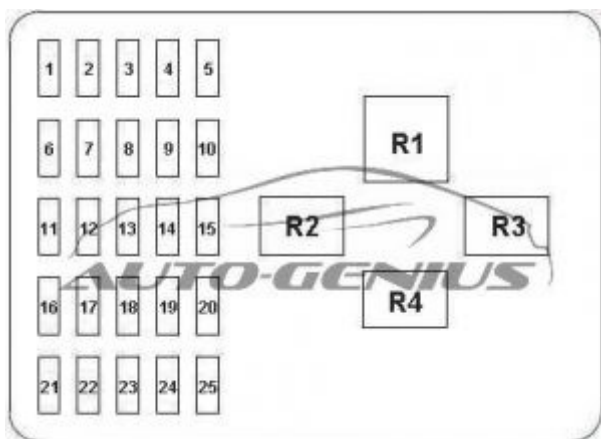


Fiat Doblo – fuse box diagram – instrument panel

Number [A]	Circuit protected
1	— —
2	20 Right front power window
3	7,5 Sound system, cellular telephone, dashboard control lighting, electrical mirrors, trailer, heated seat control lighting (+15 services), safet belt buzzer muting relay
4	— —
5	10 Left-hand dipped beam, headlight beam adjuster
6	— —
7	— —
8	10 Brake lights, instrument panel and warning lights (ignition switch powered), additional brake light (third stop light)
9	10 Boot, ceiling light, ABS control unit (ignition switch powered)
10	10 Right-hand dipped beam
11	15 Heated seats
12	20 Left front power window
13	15 Light system
14	7,5 Air bag
15	7,5 Dashboard instrument lights, number plate light
16	15 Rear window wiper
17	7,5 Heated rear view mirrors
18	30 Windscreen wiper, windscreen-rear window washer pump
19	30 Heated rear window
20	20 Cigar lighter, supplementary power socket
21	15 Subwoofer system

22	10	Sound system, cellular telephone, diagnostic socket (+ 30 services)
23	20	Door locking system
24	10	Direction indicators, hazard lights, instrument panel and warning lights (battery powered)
25	7,5	Pump system relay, fan system relay passenger compartment heater, manual climate control enable control, reversing light
Relay		
R1	—	Headlamp relay
R2	—	Heated rear view mirrors relay
R3	—	Heated rear window relay
R4	—	Low beam relay

Engine compartment fuse box

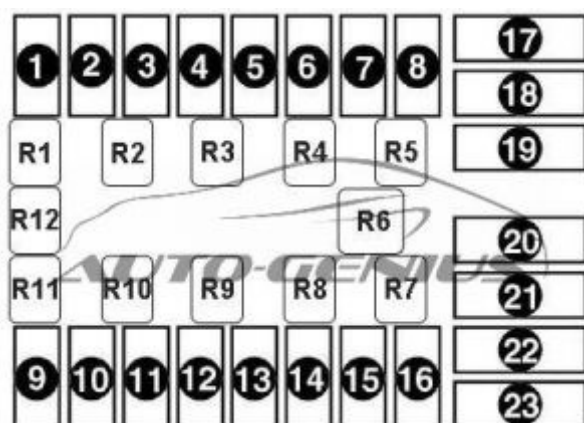

Fiat Doblo – fuse box diagram – engine

compartment

Number [A]	Circuit protected	
1	20	Fuel filter heater
2	—	—
3	15	Engine control system secondary loads, petrol fume recirculation solenoid valve, glow plug control unit, tachometer generator, lambda sensors (oxygen sensors)
4	20	Ignition coils, injectors, fuel pump
5	10	Engine control unit (power)
6	15	Fuel pump
7	—	—
8	7,5	Engine cooling system relay, engine control unit (+battery)
9	—	—
10	15	Front fog lights
11	7,5	Engine control unit (ignition switch powered), engine cooling system relay
12	7,5	Manual climate control compressor
13	15	Horn
14	10	Left-hand main beam
15	30	Passenger compartment fan

16	10	Right-hand main beam
17	40	Dashboard control unit power: optional functions
18	70	Dashboard control unit power: standard functions
19	30	One-speed radiator fan Radiator fan first speed (versions with manual climate control system)
	40	Radiator fan first speed (1.3 -1.9 Multijet versions)
20	60	Radiator fan second speed (1.4 – 1.6 versions with manual climate control system)
	40	Radiator fan second speed (1.3 -1.9 Multijet versions)
21	30	ABS power (valve)
22	40	ABS power (pump)
23	20	Ignition switch
Relay		
R1	—	Engine control relay
R2	—	—
R3	—	Engine control relay
R4	—	Fuel pump relay
R5	—	Cooling fan relay
R6	—	Cooling fan relay
R7	—	High beam relay
R8	—	Blower relay
R9	—	Horn relay
R10	—	Fog lamp relay
R11	—	—
R12	—	A/C relay

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.