


Mercury Tracer 1991 – 1996 fuse box diagram

Passenger Compartment Fuse Box

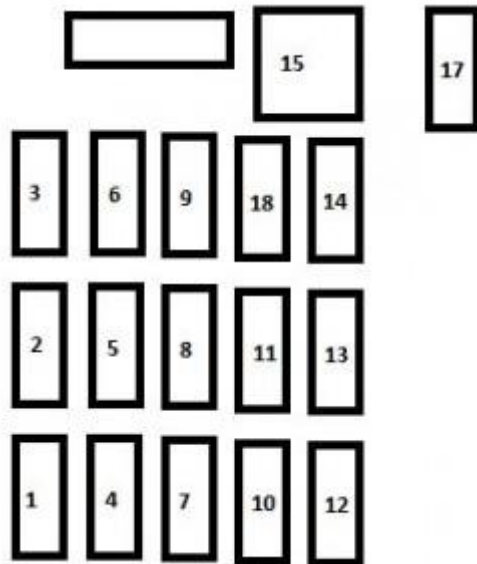

Mercury Tracer – fuse box – instrument panel


Nº	A	Description components
1	10	A/C On Indicator, Air Conditioner Relay, Air Conditioner Switch, Daytime Running Lamp Module, Daytime Running Lamp Relay, Rear Wiper and Washer Motor, Wide-Open Throttle Cutout Relay

2	30	Door Lock Motor
3	20	Brakelamp, Electronic Automatic Transaxle Module, Powertrain Control Module, High-Mount Brakelamp, Horn, Shift Interlock System, Speed Control
4	15	Hazard Flashers, Front and Rear Turn Lamp, Turn Indicator Lamp
5	30	Passive Belt Control Module, Passive Belt Motor
6	15	Powertrain Control Module (1.8L engine), Exterior Lamps, Interior Illumination, Parking Lamp Relay, Warning Chime Module
7	15	Dome and Map Lamp, Door Lock Switch, Engine Room, Ignition Key Illumination, Luggage Lamp, Premium Soundlifier, Radio (memory), Powertrain Control Module, Shift Interlock System, Visor Mirror Lamp, Warning Chime Module
8	30	Power Window Motor

9	15	Moon Roof Motor
10	15	Cooling Fan System, Powertrain Control Module Power Relay
11	15	Air Bag Diagnostic Module, Backup Lamps, Cluster, Flasher Unit, Passive Belt Control Module, Powertrain Control Module (Canada Only), Shift-Lock System, Speed Control, Turn Signal Flashers, Warning Chime
12	15	Instrument Panel Dimmer Module, Radio, Remote Control Mirror
13	20	Front Wiper and Washer Motor, Interval Governor, Interval Wiper and Washer Switch
14	20	Powertrain Control Module (1.8L engine), Rear Window Defrost
15	30	<i>Circuit breaker:</i> Blower Motor, Powertrain Control Module (1.8L engine)
16	20	1.8 L (BP): Horn (on joint box side, not shown)

	10	1.9 L (CVH): Heated Exhaust Gas Oxygen Sensor (on joint box side, not shown) Horn (on joint box side, not shown)
17	20	Cigar Lighter (on joint box side)
18	10	1.8 L (BP): Anti-lock Brake System

Fuse box in engine compartment

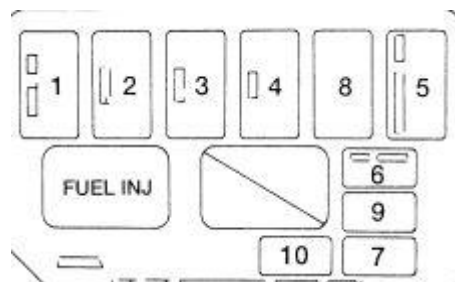

Mercury Tracer – fuse box – engine compartment

Nº	A	Description components
1	30	Charging System (1.8L Engine), Fuel Injection System

2	30	Daytime Running Lamps (Canada), Fog Lamps, Headlamps, High Beam Indicator
3	80	1.8 L (BP): Charging System, Engine Compartment Fuse Panel (ABS, A/C, BTN, Fan, Horn), Engine Controls, Instrument Cluster (Manual Transaxle Only), Instrument Panel Fuse Panel (Cigar, Defrost, Engine ABS, Heater, Meter, Power Window, Radio, Rear Wiper, Sun Roof), Starting System
	100	1.9 L (CVH): Charging System, Engine Compartment Fuse Panel (ABS, A/C, BTN, Fan), Engine Controls, Instrument Cluster (Manual Transaxle Only), Instrument Panel Fuse Panel (Cigar, Defrost, Engine ABS, Heater, HEGO, Meter, Power Window, Radio, Rear Wiper, Sun Roof), Starting System
4	60	1.8 L (BP): Instrument Panel Fuse Panel (Belt, Door Lock, Hazard, Room, Stop, Tail)
	40	1.9 L (CVH): Charging System (1.9L Engine), Instrument Panel Fuse Panel (Belt, Door Lock, Hazard, Room, Stop, Tail)
5	30	1.8 L (BP) – MTX: Cooling Fan System

	40	1.9 L (CVH) and 1.8 L (BP) – ATX: Cooling Fan System
6	20	1.8 L (BP): Air Conditioner Magnet Clutch
	10	1.9 L (CVH): Air Conditioner Magnet Clutch, Powertrain Control Module
7	10	1.8 L (BP): Fuel Pump Relay, Powertrain Control Module
	20	1.9 L (CVH): Fuel Pump
8	60	1.8 L (BP): Anti-lock Brake System
9	10	Air Bag Diagnostic Module
10	20	1.8 L (BP): Fuel pump
	10	1.9 L (CVH): OBD-II (Data link connector)