


Mercury Tracer 1997 – 1999 fuse box diagram

Engine Compartment Fuse Box

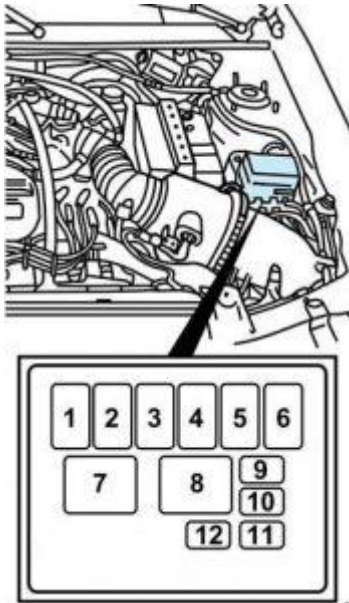


Mercury Tracer – fuse box diagram – engine compartment

No.	Fuse	A	Description
1	FUEL INJ	30	Air Bags, Engine Controls, Generator

2	DEFOG	30	Rear Window Defrost
3	MAIN	100	Charging System, BTN, Cooling Fan, Fuel Pump, OBD-II, ABS Fuses, Ignition Switch, Headlamps
4	BTN	40	Hazard
5	ABS	60	ABS Main Relay
6	COOLING FAN	40	Constant Control Relay Module
8	–	–	–
9	OBD II	10	Data Link Connector (DLC), Instrument Cluster
10	FUEL PUMP	20	Engine Controls

11	HEAD RH	10	Headlamps
		20	Headlamps
12	HEAD LH	10	Headlamps
		20	Headlamps
Relay			
7	Headlamps		

Passenger Compartment Fuse Box

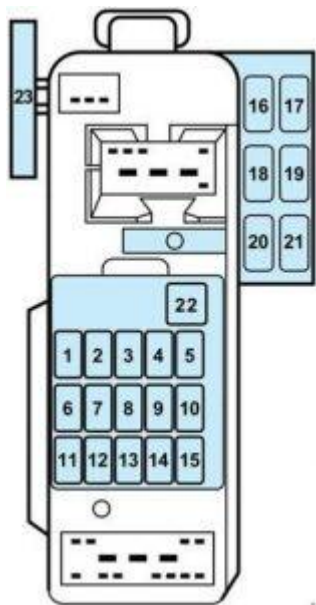

Mercury Tracer – fuse box diagram – passenger compartment

No.	Fuse	A	Description
1	STOP	15	Stop lamps, Shift Lock
2	TAIL	15	Instrument Cluster Illumination, License Plate Lamp, Parking Lamps, Side Marker Lamps, Tail Lamps, (Radio, Climate Control Illumination

3	–	–	–
4	ASC	10	Speed control
5	–	–	–
6	DOOR LOCK	30	Power Door Locks
7	HORN	15	Horn
8	AIR COND	15	A/C-Heater, ABS
9	METER	10	Backup Lamps, Engine Controls, Instrument Cluster, Rear Window Defrost, Shift Lock, Warning Chime, Turn Signal Switch
10	WIPER	20	Wiper/Washer, Blower Relay

11	R.WIPER	10	Daytime Running Lamps, Liftgate Wiper/Washer
12	HAZARD	15	Hazard Lamps
13	ROOM	10	Engine Controls, Remote Anti-Theft Personality (RAP) Module, Radio, Shift Lock, Courtesy Lamps, Starting System, Warning Chime
14	ENGINE	15	Air Bag, Engine Controls, TR Sensor
15	MIRRORS	5	Power Mirrors, Radio, Remote Keyless Entry (RKE)
16	FUEL INJ	10	H02S, Evaporative Emission Purge Flow Sensor
17	–	–	–
18	FOG	10	Fog Lamps, Daytime Running Lamps (DRL)
19	AUDIO	15	Premium sound amplifier, CD changer

20	CIGAR	20	Cigar lighter
21	RADIO	15	Radio
22	P. WINDOW	30	<i>Circuit breaker:</i> Power Windows
23	BLOWER	30	<i>Circuit breaker:</i> A/C-Heater