


# Land Rover Discovery 1989 – 1998 fuse box diagram

## Fuse Box

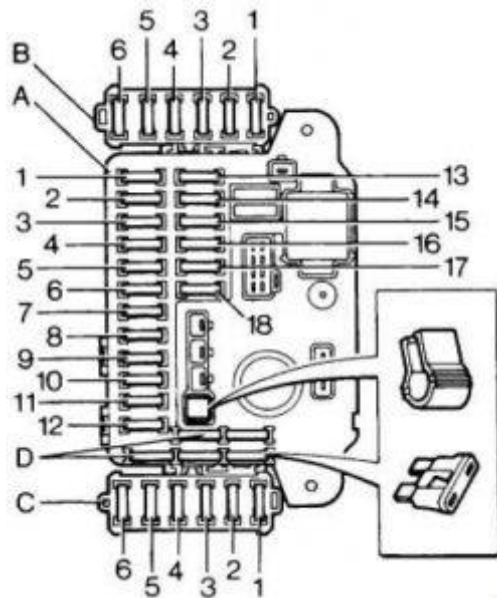


Land Rover Discover – fuse box diagram

| No. | A  | Description                       |
|-----|----|-----------------------------------|
| 1   | 15 | Stop lights, direction indicators |
| 2   | 10 | LH side light                     |
| 3   | 10 | Radio/cassette/CD player          |
| 4   | 10 | RH headlight main beam            |
| 5   | 10 | LH headlight main beam            |
| 6   | 20 | Cigar lighter                     |
| 7   | 10 | Airbag SRS                        |

|               |    |                                                       |
|---------------|----|-------------------------------------------------------|
| 8             | 10 | RH side lights                                        |
| 9             | 10 | Rear fog guard lights                                 |
| 10            | 10 | RH headlight dipped beam                              |
| 11            | 10 | LH headlight dipped beam                              |
| 12            | 10 | Multi-function unit                                   |
| 13            | 10 | Ignition feed for Multi-function unit                 |
| 14            | 10 | Instruments, clock, speed transducer, SRS (secondary) |
| 15            | 10 | Air conditioning, windows                             |
| 16            | 20 | Washers & wipers – front                              |
| 17            | 10 | Starter, glow plug                                    |
| 18            | 10 | Wash/wipe – rear, mirrors, cruise control             |
| 'B' Satellite |    |                                                       |
| 1             | 30 | Electric windows – front                              |
| 2             | 30 | Electric windows – rear                               |
| 3             | 10 | Anti-lock braking                                     |

|               |    |                               |
|---------------|----|-------------------------------|
| 4             | 15 | Central door locking          |
| 5             | 30 | Electric sun roof             |
| 6             | 20 | Trailer lights                |
| 'C' Satellite |    |                               |
| 1             | 15 | Anti-theft alarm              |
| 2             | 20 | Headlight washers             |
| 3             | 10 | Engine management             |
| 4             | 5  | Anti-lock brakes              |
| 5             | 10 | Anti-theft alarm              |
| 6             | 25 | Rear air conditioning, heater |

Engine Compartment Fuse Box

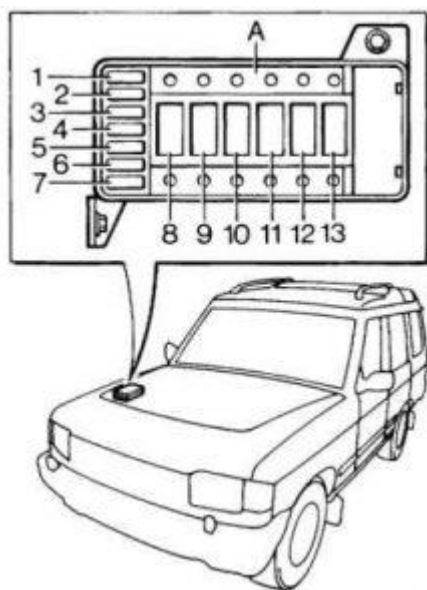

Land Rover Discover – fuse box diagram – engine compartment

| No. | A  | Description                 |
|-----|----|-----------------------------|
| 1   | 30 | Heated rear window          |
| 2   | 20 | Lights                      |
| 3   | 30 | Air conditioning            |
| 4   | 30 | Hazard warning lights, horn |
| 5   | 30 | Anti-lock braking           |
| 6   | 5  | Fuel pump                   |
| 7   | 20 | Fuel system                 |
| 8   |    | ABS pump                    |

|    |  |                                                |
|----|--|------------------------------------------------|
| 9  |  | Ignition circuits                              |
| 10 |  | Lighting                                       |
| 11 |  | Window lift, central door locking, rear blower |
| 12 |  | Heater, air conditioning                       |
| 13 |  | Generator                                      |