


Lincoln Mark VIII 1996 – 1998 fuse box diagram

The instrument panel fuse box

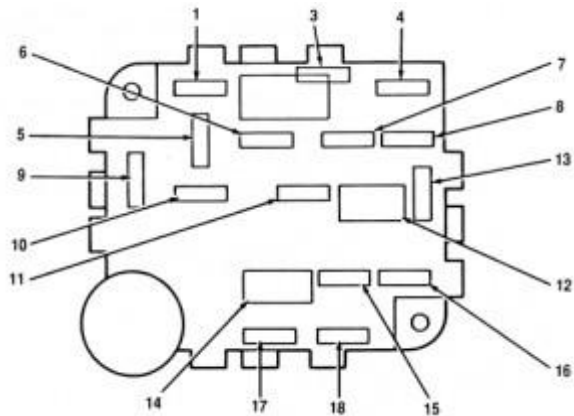

Lincoln Mark VIII – fuse box – instrument


panel

Fuse location	Fuse ampere rating	Description
17	10	Electric instrument panel
18	—	Not used
19	10	Steering column/ignition/lighting module
20	10	Message center. electronic instrument panel. electronic Automatic Temperature Control module
21	10	Anti-lock brake control module
22	—	Not used
23	—	Not used

24	—	Not used
25	10	Steering column/ignition/lighting module
26	15	Steering column/ignition/lighting module
27	—	Not used
28	10	I/P warning indicator display, Air suspension/electronically variable orifice power steering module, rear windows defrost module, steering wheel position sensor, transmission control switch
29	—	Not used
30	10	Heated mirrors
31	10	Steering column/ignition/lighting module
32	15	Stop lamp switch
33	—	Not used
34	15	Heated seats, backup lamps, speed control, daytime running lamps, powertrain control module, electronic automatic temperature control module, day/night mirror
35	10	Driver's power and heated seats
36	—	Not used
37	—	Not used

38	10	data link connector
39	—	Not used
40	—	Not used
41	10	Keyless entry, power door locks, power mirror switch, memory/recall switch, driver's door module

The high current fuses

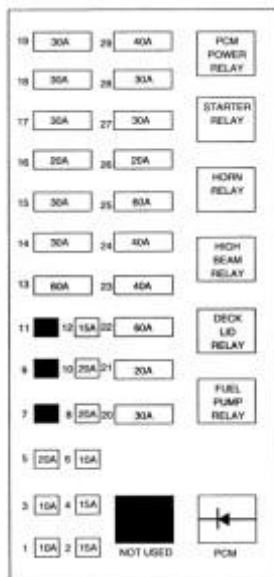

Lincoln Mark VIII – fuse box – high current

Fuse location	Fuse ampere rating	Description
1	10 MINI	Powertrain control module
2	15 MINI	High beam relay, daytime running lamps module
3	10 MINI	Thermactor pump motor

4	15 MINI	Air suspension, electronically variable orifice power steering
5	30 MINI	Trunk Lid Relay
6	10 MINI	Air bag
7	—	The high current fuses
8	20 MINI	Horn relay
9	—	The high current fuses
10	20 MINI	Radio amplifier, CD changer
11	—	The high current fuses
12	15 MINI	Steering column/ignition/lighting module
13	60 MAXI	Air suspension
14	30 MAXI	Delayed accessory power relay #1
15	30 MAXI	Powertrain control module, PCM power relay, engine compartment fuse 1
16	20 MAXI	Fuel pump relay, fuel pump module
17	30 MAXI	Electric air management, engine compartment fuse 3
18	30 MAXI	Passenger seat module, passenger lumbar, I/P fuse 12

19	30 MAXI	Driver seat module, driver lumbar, I/P fuse 35
20	30 MAXI	Anti-lock brake control module
21	20 MAXI	Anti-lock brake control module, EVAC/fill connector
22	60 MAXI	I/P fuses 1,7,13,19,25,31
23	40 MAXI	Variable load control module
24	40 MAXI	Rear window defrost control, I/P fuse 30
25	60 MAXI	I/P fuses 2,14,20,26,32,38, engine compartment fuse 5
26	20 MAXI	Ignition switch, I/P fuses (5,9,11,15,17,21)
27	30 MAXI	Starter moptor solenoid, ignition switch, I/P fuse 6,28,34
28	30 MAXI	Delayed accessory power #2, I/P fuse 41
29	40 MAXI	Blower motor relay