


Chevrolet Camaro 1996 fuse box diagram

Main Fuse Block

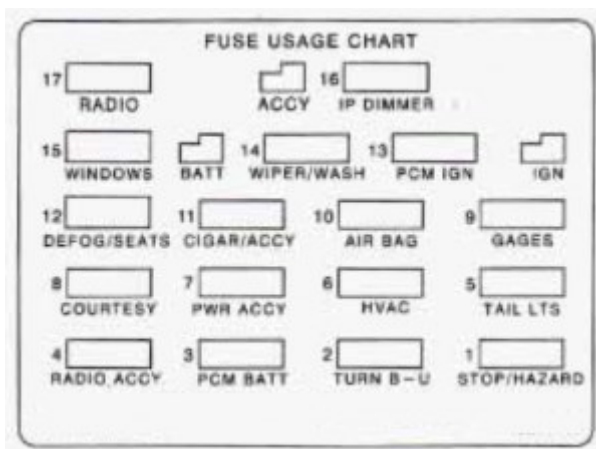

Chevrolet Camaro – fuse box – main fuse

block

Fuses/Circuit Breaker	Fuse name	Usage
1	STOP/HAZARD	Hazard Flasher, Brake Switch Assembly
2	TURN B-U	Performance/Traction Control Switch, Transmission Range Switch, Back-up Lamp Switch, Turn Flasher, Daytime Running Lamps (DRL) Module
3	PCM BATT	Powertrain Control Module (PCM), Fuel Pump Relay, Remote Compact Disc Changer
4	RADIO ASSY	Radio Power Antenna, BOSE' Relay
5	TAIL LTS	Daytime Running Lamps (DRL) Module, Headlamp Switch
6	HVAC	HVAC Selector Switch, Rear Defogger Timer Relay, Rear Defogger Switch, Rear Defogger Switch/Timer
7	PWR ACCY	Park Lamp Relay, Hatch Release Relay, Power Mirror Switch, Radio, Shock Sensor, Instrument Cluster
8	COURTESY	Body Control Module (BCM)
9	GAGES	Body Control Module (BCM), Brake Switch Assembly' (BTS1), Instrument Cluster, Daytime Running Lamps (DRL) Module, Auxiliary Accessory Wire
10	AIR BAG	Air Bag System, Dual Pole Arming Sensor
11	CIGAR/ACCY	Cigarette Lighter, Data Link Connector (DLC), Auxiliary Accessory Wire
12	PCM IGN	Powertrain Control Module (PCM), EVAP Canister Purge Vacuum Switch, EVAP Canister
13	WIPER/WASH	Wiper Motor Assembly, Wiper/Washer Switch
14	WIPER/WASH	Windshield Wiper/Washer
15	WINDOWS	Power Windows Switch (RH, LH), Express-Down Module, Coolant Level Latching Module, Convertible Top Switch
16	I/P DIMMER	Door Illumination Lamp (LH, RH), Headlamp Switch, Fog Lamp Switch, Instrument Cluster, HVAC Control Assembly, PRNDL Illumination Lamp, Ashtray Lamp, Radio, Steering

		Wheel Controls-Radio, Rear Window Defogger Switchmimer, Performance/ASR Switch
17	RADIO	Body Control Module (BCM), Radio, Amplifier, Steering Wheel Controls-Radio

Underhood Electrical Center



Chevrolet Camaro – fuse box – underhood

electrical center

Fuse	name	Usage
ABS	IGN	Anti-Lock Brake System
ACTUATORS		Daytime Running Lamp Module, Headlamp Switch, Cooling Fan Relay, Exhaust, Gas Recirculation, EVAP Canister Purge Solenoid
R	HDLP DR	Headlamp Door Module
L	HDLP DR	Headlamp Door Module
ABS	VLV	Brake Pressure Valve
ABS	BAT	Electronic Brake Control Module
AIR	PUMP	Air Pump (VS) Relay, Pump, Bleed Valve and Cooling Fan
HORN		Horn Relay
INJECTOR		Fuel Injector
ENG	SEN	Mass Air Flow, Heated Oxygen Sensor, Reverse Lockout Solenoid, Skip Shift Solenoid, Automatic Transmission, Brake Switch
IGNITION		V6 VIN K: Electronic Ignition Control Module
		V8 VIN P: Ignition Coil Module, Crankshaft Position Sensor, Ignition Coil
A/C-CRUISE		Air Conditioning Compressor Relay; Cruise Control Switches and Module
Relays		Usage
B		Air Conditioning Compressor
C		Anti-Lock Brake System/Traction Control System (ASR)
D		Cooling Fan 1
E		Air Pump
F		Cooling Fan 2
G		—
H		Fan Lamps
J		Cooling Fan 3