

Lincoln Continental 2017 – 2019 fuse box diagram

Engine Compartment Fuse Box



Lincoln Continental – fuse box diagram – engine

compartment

No,	A	Protected components
1	20	Powertrain control module power
2	20	Engine emissions (MIL)
3	20	A/C clutch control relay coil, VACC, Active grill shutters, Cooling fan relays, All-wheel drive module (2,7L and 3.7L engines)
4	20	Ignition coils (3.7L engine)
5	–	Not used
6	15	Fuel injectors (3.7L engine)

7	5	Rear recline relay box
8	–	Not used
9	–	Not used
10	–	Not used
12	–	Not used
13	40	Rear seat recline
15	20	Horn
16	10	A/C clutch
22	30	Electric cooling fan
23	–	Not used
26	30	Anti-lock brake system valves
27	–	Not used
28	30	Rear climate controlled seats
29	–	Run/start relay
30	–	Not used

31	10	Electric power-assisted steering, Electric parking brake
32	10	Anti-lock brake system module
33	10	Powertrain control module
34	10	Blind spot information system, Adaptive cruise control, Front view camera, 360 degree camera module, Rear camera, Transmission range control module
35	–	Not used
41	40	Right heated windshield
42	40	Blower motor
43	–	Not used
44	50	Body control module/voltage quality module bus
45	–	Not used
46	50	Electric cooling fan
47	50	Electric cooling fan
48	50	Body control module RP1 bus
49	40	Torque vectoring (3.0L engine)

50	50	Body control module RP2 bus
51	–	Not used
52	60	Anti-lock brake system pump
53	40	Adaptive front steering
54	40	Left heated windshield
55	40	Heated rear window
56	40	Power inverter
57	30	Power deck lid module, Manual deck lid latch
58	–	Not used
59	–	Not used
60	30	Fuel pump
61	–	Not used
62	20	Power point 2A
63	30	Power seat control module, Front heated seats
64	–	Not used


65	30	Fuel pump 2
66	30	Passenger power seat
67	20	Power point 1B
68	15	Auxiliary blower
69	20	Power point 1A
70	–	Not used
71	–	Not used
72	30	Driver power seat module
73	–	Not used
74	25	Wiper motor
75	–	Not used
76	20	Not used (spare)
77	–	Not used
78	30	Starter
79	20	Auxiliary transmission pump (2.0L engine with start-stop)

80	–	Not used
81	5	USB smart charge – passenger side
82	5	USB smart charge – console
83	20	Electronic door latch (left rear)
84	5	USB smart charge – driver side
85	20	Electronic door latch (right front)
86	20	Electronic door latch (right rear)
87	15	Transmission range control module
88	5	Rear recline
89	20	Electronic door latch (left front)
90	10	Powertrain control module relay keep alive
91	10	Brake on/off switch
92	15	Front multi-contour seat module
93	15	Rear multi-contour seats
94	20	Right hand side high intensity discharge headlamp

95	20	Left hand side high intensity discharge headlamp
96	10	Wiper park heater
97	10	Alternator sense line
98	5	Rain sensor
99	–	Not used
Relay		
11	Torque vectoring (3.0L engine)	
14	Powertrain control module	
17	Not used	
18	Not used	
19	Heated rear window	
20	Electric cooling fan	
21	Electric cooling fan	
24	Not used	
25	Blower motor	

36	Electric cooling fan
37	Rear seat recline
38	A/C compressor clutch
39	Horn
40	Not used

Passenger Compartment Fuse Box

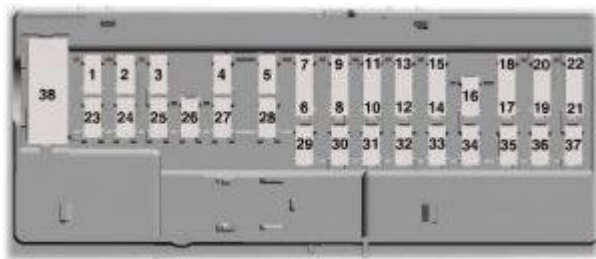

Lincoln Continental – fuse box diagram – passenger compartment

No,	A	Protected components
1	–	Not used
2	7,5	Driver seat switch, Passenger seat switch
3	20	Driver unlock relay
4	5	Not used (spare)
5	20	Subwoofer amplifier, Revel digital signal processing amplifier
6	–	Not used

7	–	Not used
8	10	Security horn
9	10	Rear seat entertainment module
10	5	Telematics module, Power decklid module
11	5	Keypad, Outside lock switch, Combined security sensor module
12	7,5	Front control interface module (climate control), Gear shift module, Rear climate control module
13	7,5	Instrument cluster, Smart data link, Steering column control module
14	10	Restraints control module
15	10	Smart datalink connector power
16	–	Decklid release relay
17	5	Not used (spare)
18	5	Push button start switch
19	7,5	LED heads up display
20	7,5	Headlamp control module
21	5	Humidity sensor

22	5	Occupant classification sensor
23	10	Delayed accessory power, Left front window switch, Moonroof, Rear window power sunshade module, DC inverter
24	20	Central lock relay
25	30	Left front door zone module
26	30	Right front door zone module
27	30	Moonroof
28	20	Revel digital signal processing amplifier
29	30	Left rear door zone module
30	30	Right rear door zone module
31	15	Column memory module
32	10	SYNC, Radio frequency receiver
33	20	Radio, Remote CD mechanism
34	30	Run/start relay
35	5	Restraint control module

36	15	Lane keeping system module, Auto high beam, Electrochromic mirrors, Rear heated seats, Vehicle dynamics module
37	20	Heated steering wheel, Steering effort control module, Steering angle control module
38	30	Left hand front window motor, Rear power window motors