


Chevrolet Suburban 1995 – 1996 fuse box diagram

Fuse block

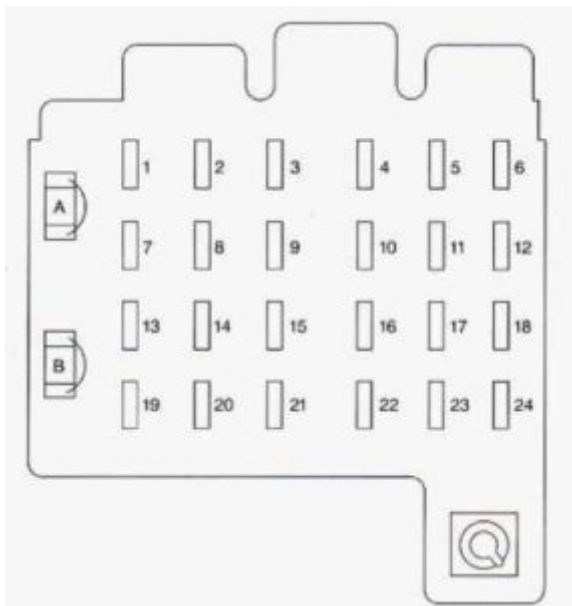

Chevrolet Suburban – fuse box

Fuse position	Fuse name	Circuit protected
1	STOP/HAZ	Stop/TCC Switch, Buzzer, CHMSL, Hazard Lamps, Stop Lamps
2	T CASE	Transfer Case
3	CTSY	Courtesy Lamps, Cargo Lamp, Glove Box Light, Dome/RDG Lamps, Vanity Mirrors, Pwr Mirrors
4	GAGES	IP Cluster, DRL Relay, HDLP Switch, Keyless Entry, Low Coolant Module
5	RR WAC	RR HVAC Controls
6	CRUISE	Cruise Control
7	AUX PWR	Aux Power Outlet
8	CRANK	Diesel Fuel Pump, DERM, ECM
9	PARK LPS	Lic Lamp, Park Lamp, Tail Lamp, Roof Marker Lamp, Tdi1 Gate Lamps, Front Side Markers, Door Switch Illum, Fender Lamp
10	AIR BAG	DERM
11	WIPER	Wiper Motor, Washer Pump
12	HTR-A/C	A/C, A/C Blower, High Blower Relay
13	CIG LTR	Power Amp, Rear Liftglass, Cig Lighter, Door Lock Relay, Pwr Lumbar Seat
14	ILLUM	4WD, Indicator, LP Cluster, HVAC Controls, RR HVAC Controls, IP Switches, Radio Illumination
15	DRL-FOG	DRL Relay, Fog Lamp Relay
16	TURN-B/U	Frt Turn, RR Turn, B/U Lps
17	RADIO	Radio (Ign)

18	BRAKE	DRAC, 4WAL PCM. ABS, ... Cruise
19	RADIO BATT	Radio (Batt)
20	TRANS	PRNDL, Auto Transmission, Speedo, Check Gages Tell Tale
21	—	Not Used
22	—	Not Used
23	RR Wiper	Rear Wiper, Rear Wash Pump
24	4WD	Frt Axle, 4WD Indicator Lamp
A*	PWR ACCY	Pwr Door Lock, 6-Way Pwr Seat, Keyless Entry Module
B*	PWR WDOS	Power Windows
*Circuit Breaker		