


Pontiac Boneville 1994 – 1995 fuse box diagram

Left Side Fuse Panel

Located to the left of the steering wheel, the panel is under the instrument panel.

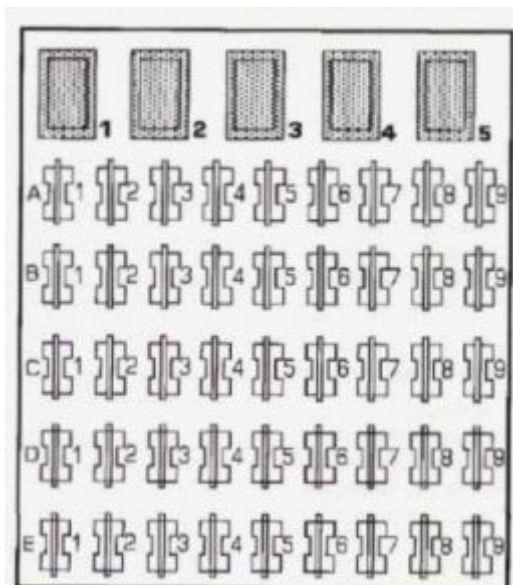


Pontiac Boneville – fuse box – left side

Fuse	Ampere rating [A]	Usage
1	30	Circuit Breaker-Power Sunroof
2	—	Not Used
3	25	Circuit Breaker-Power Seats
4	—	Not Used
5	—	Not Used
1A	10	Crank Signal-Air Bag-VATS
2A	10	Spare
3A	—	Not Used
4A	10	Interior Lamps
5A	10	Ignition (Run), Automatic A/C Control, Base Cluster
6A	15	Courtesy Lamps, Power Mirrors
7A	—	Not Used
8A	—	Not Used
9A	15	Cigarette Light.er
1B	20	Turn Signal, Back-up Lamps, Cornering Lamps, Brake-Transaxle Shift Interlock
2B	15	Spare
3B	—	Not Used

4B	—	Not Used
5B	10	Anti-Lock Brake System, Ride Control
6B	20	Brake and Hazard Lamps
7B	—	Not Used
8B	—	Not Used
9B	20	Level Control
1C	10	Air Bag
2C	20	Spare
3C	—	Not Used
4C	—	Not Used
5C	10	Cooling Fans, Transaxle
6C	15	Parking Lamps
7C	—	Not Used
8C	—	Not Used
9C	10	Battery, Chime, Radio, Cluster
1D	15	Ignition (Run/Crank), Chime, Cluster
2D	15	Spare
3D	10	Heated Mirror
4D	—	Not Used
5D	25	Base A/C
6D	15	Fog Lamps
7D	—	Not Used
8D	10	Radio
9D	15	Cigarette Lighter (Rear)
1E	20	Auxiliary Outlet
2E	—	Not Used
3E	10	Ignition (Off/Unlock)
4E	—	Not Used
5E	—	Not Used
6E	—	Not Used
7E	—	Not Used
8E	25	Wipers, Washer
9E	30	Rear Window Defog

Right Side Fuse Panel

Additional fuses are located in the relay center, on the far right side, below the instrument panel.

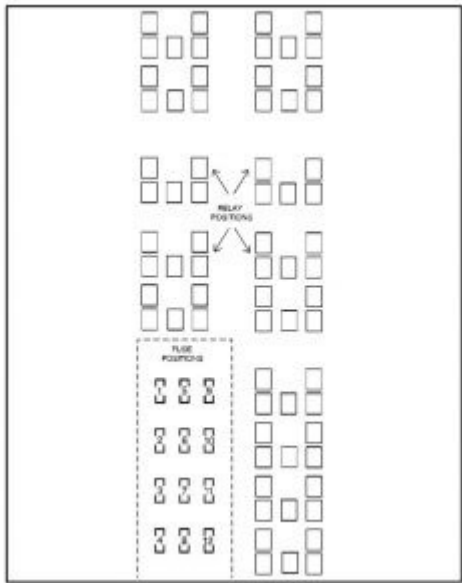

Pontiac Boneville – fuse box – right side

Fuse	Ampere rating [A]	Usage
1	20	Door Locks
2	15	Power Antenna, Lock Switch
3	15	Horns
4	—	Not Used
5	15	Cruise Control, Misc. Engine Controls
6	20	Fuel Pump
7	10	Injectors
8	10	Powertrain Control Module PASS-Key @II
9	—	Not Used
10	—	Not Used
11	10	A/C Programmer
12	—	Not Used