


Scion FR-S 2013 – 2016 fuse box diagram

Engine compartment

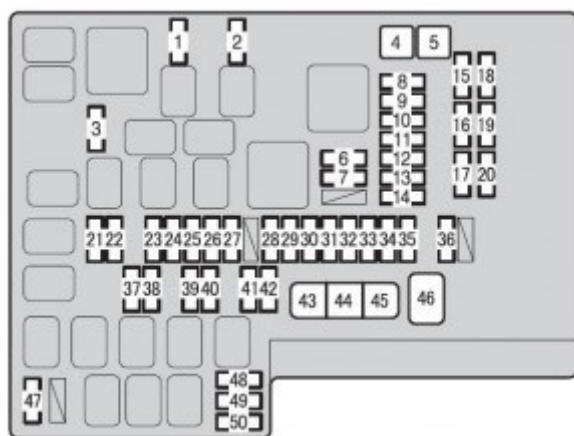


Scion FR-S – fuse box – engine compartment

Fuse	Ampere rating [A]	Circuit
1 MIR HTR	7,5	Outside rear view mirror defoggers
2 RDI	25	Electric cooling fan
3 (PUSH-AT)	7,5	Engine control unit
4 ABS NO. 1	40	ABS
5 HEATER	50	Air conditioning system
6 WASHER	10	Windshield washer
7 WIPER	30	Windshield wipers
8 RR DEF	30	Rear window defogger
9 (RR FOG)	10	—
10 D FR DOOR	25	Power window (driver's side)
11 (CDS)	25	Electric cooling fan
12 D-OP	25	—
13 ABS NO. 2	25	ABS
14 D FL DOOR	25	Power window (passenger's side)
15 SPARE	—	Spare fuse
16 SPARE	—	Spare fuse
17 SPARE	—	Spare fuse
18 SPARE	—	Spare fuse
19 SPARE	—	Spare fuse
20 SPARE	—	Spare fuse
21 ST	7,5	Starting system
22 ALT-S	7,5	Charging system
23 (STR LOCK)	7,5	—
24 D/L	20	Power door lock

25	ETCS	15	Engine control unit
26	(AT+B)	7,5	Transmission
27	(AM2 NO. 2)	7,5	—
28	EFI (CTRL)	15	Engine control unit
29	EFI (HTR)	15	Multiport fuel injection system/sequential multiport fuel injection system
30	EFI (IGN)	15	Starting system
31	EFI (+B)	7,5	Engine control unit
32	HAZ	15	Turn signal lights, emergency flashers
33	MPX-B	7,5	Gauge and meters
34	F/PMP	20	Multiport fuel injection system/sequential multiport fuel injection system
35	IG2 MAIN	30	SRS airbag system, engine control unit
36	DCC	30	Interior light, wireless remote control, main body ECU
37	HORN NO. 2	7,5	Horn
38	HORN NO. 1	7,5	Horn
39	H-LP LH LO	15	Left-hand headlight (low beam)
40	H-LP RH LO	15	Right-hand headlight (low beam)
41	H-LP LH HI	10	Left-hand headlight (high beam)
42	H-LP RH HI	10	Right-hand headlight (high beam)
43	INJ	30	Multiport fuel injection system/sequential multiport fuel injection system
44	H-LP WASHER	30	—
45	AM2 NO. 1	40	Starting system, engine control unit
46	EPS	80	Electric power steering
47	A/B MAIN	15	SRS airbag system
48	ECU-B	7,5	Wireless remote control, main body ECU
49	DOME	20	Interior light
50	IG2	7,5	Engine control unit

Instrument panel

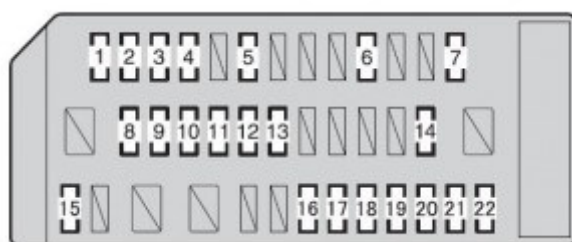

Scion FR-S – fuse box – instrument panel

Fuse	Ampere rating [A]	Circuit
------	-------------------	---------

1	ECU ACC	10	Main body ECU, outside rear view mirrors
2	P/POINT No.2	15	Power outlet
3	PANEL	10	Illumination
4	TAIL	10	Tail lights
5	DRL	10	Daytime running light system
6	STOP	7,5	Stop lights
7	OBD	7,5	On-board diagnosis system
8	HEATER-S	7,5	Air conditioning system
9	HEATER	10	Air conditioning system
10	FR FOG LH	10	—
11	FR FOG RH	10	—
12	BK/UP LP	7,5	Back-up lights
13	ECU IG1	10	ABS, electric power steering
14	AM1	7,5	Starting system
15	AMP	15	Audio system
16	AT UNIT	15	Transmission
17	GAUGE	7,5	Gauge and meters
18	ECU IG2	10	Engine control unit
19	SEAT HTR LH	10	—
20	SEAT HTR RH	10	—
21	RADIO	7,5	Audio system
22	P/POINT No.1	15	Power outlet